



gemini
ITALY

**Multi-Functional Cool
and Heat Blender**
多用途冷熱料理攪拌機

MODEL NO.: GHBL800










Before using product, please read this instruction manual carefully, this product is for household or similar place using only.

Table of Content

1. Safety using instruction	3
2. Product operation detail	4
3. Product overview	6
4. Operation interface and instruction	7
5. Cleaning and maintenance	14
6. Trouble shooting	15
7. Technical parameters	16

Safety using instruction

-  **Prohibition: Prohibit the risk of causing to person danger, injury, and huge property lost**
-  **Warning: Warn the risk of causing to person danger, injury and huge property lost.**
-  **Caution: Take care of the risk of causing to person injury and property damage.**

 Caution			
	Do not use same socket with high power appliance. 		Connect to AC 220V/50Hz power supply socket 
	Do not use the damaged power cord, precaution of electric shock. 		Do not touch power cord and appliance by wet hand avoid the electric leakage. 
	Put in or off plug, please do not pull the soft cord directly. 		Please take off the plug if firing or smoking during operation. 
	Please ask the professional worker, manufacturer or service center to replace if power cord is damaged, to avoid the danger.		
	Please do not rinse or immerse the machine body in water. 		Do not use machine near the fire source or high temperature (Above 40 degree) 
	Put machine onto flat and rigid place and keep distance from the other high value object. 		Before take out or insert the jar, please cancel the current function and cut off power. 
	Do not touch jar during working, avoid scalding. 		During watering, please keep between the Max and Min level. 
	After completed, make sure to cut off the power before taking off the jar. 		When cleaning, please be careful of the sharp knife to hurt your fingers/hands. 
	Please do not put machine into refrigerator, please clean and dry it up on the ventilation before storing. 		

Product operation detail

Prohibition



1. This product is for personal or household use only. Not commercial use. User has to be guided by the user manual.
2. Do not immerse the machine body and jar into water or the other liquid, and also cannot clean it under water and the other liquid to prevent electric leakage or electronic components damaged.
3. Do not take product near high temperature, high magnet, inflammable and explosive gas.(Such as nature gas, LPG etc.) to avoid components damaged or fire

Warning

1. Before using, please carefully read all clauses in the manual, please contact the sales center or service center if any doubt or unclear.
2. Please refer the manual, recipes selection according to the function and ingredient ratio.
3. Before using, make sure the using voltage is complying with the rating voltage marked in the label.
4. If the power cord is damaged, to avoid danger, please contact the service department or to replace the service center which our company appointed. Do not disassemble by yourself.
5. This appliance shall not be used by children, keep the appliance and its cord out of reach of children.Children shall not play with the appliance.
6. During operation, please do not touch knives, motor or mobilization parts, to avoid person injury or machine damaged.
7. Do not use any accessories which not provided by our company or not belonged to this model. (Such as glass jar, jar lid etc.) to avoid danger.
8. Disassemble the components of the glass jar, please make sure the power is off.
9. Please do not touch the hot surface. Touch only low temperature area like handle or control interface.
10. When in heating mode, please do not touch glass jar to avoid scalding.
11. Please cool down the product before cleaning.
12. The total volume of water and ingredient cannot exceed the max. mark on the glass jar.
13. During operation, please do not lift the jar or open the lid to avoid danger.
14. Please do not move the machine during operation, to avoid ingredient spilled and cause scald and electric shock.

15. After blending, please make sure motor and knives stop working and power off before taking off the jar.
16. When the product is used for long time, the lid maybe dyed, it is normal situation, not harmful for your health.
17. The product was adapted with high speed motor, It is a normal phenomenon that there is sound intermittently.
18. If the motor stops working during operation, it maybe caused by over-heat protection, please power off and cold down for 20- 30 minutes before restart.
19. The handle of jar and the coupling of the machine body cannot be run into water. If water goes inside, please dry before using.
20. Do not put machine or its components into microwave machine to use.
21. Do not run the machine non-loaded to avoid lifespan shorten.
22. Do not use this machine to the other purpose without mentioned in the manual.
23. Do not insert or pull out the plug with wet hands to avoid electric shock.
24. Do not let the machine working without supervision.
25. When making hot drinks, please make sure the mixing jar and feeding lid is in right position, please do not touch the mixing jar and feeding lid to avoid scald.
26. Please operate the machine on the flat table, do not operate it on the rug, towel etc. texture, and plastic, paper which is easily burned.
27. Do not use accessories and components which is not belonging to this products to avoid fire and injury.
28. When machine is heating, take care of the steam outlet avoiding scald.
29. Please do not put product and its accessories into the disinfection cabinet, dishes washer to sterilize to avoid out of shape.
30. If power cord is damaged, to avoid danger, please ask service center or professional department to replace.
31. Switch off the appliance and disconnect from power supply before changing accessories or approaching parts that move in use.
32. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning. Clean gloves should be worn or excessive force may cause hand injury.
33. Always disconnect the appliance from the power supply if it is left unattended and before assembling, disassembling or cleaning
34. Appliances cannot be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
35. Please put the machine out of the children reach when using do not let disable or children to use or play with this machine.


PRODUCT OVERVIEW:

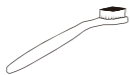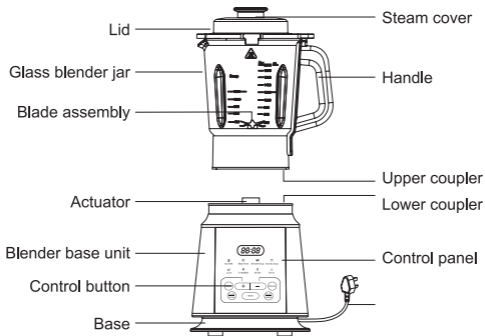

Cleaning brush




Measuring cup

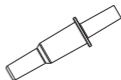

Stir bar

Operation interface and instruction

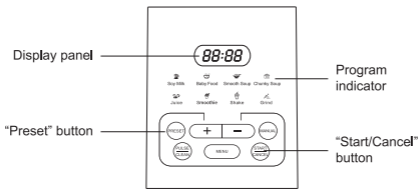

Food guide

Function introduction	Function Guild	Heat	Blend	Working hours	Food ratio description
Soy milk	It is used to make soy milk based on soybeans and tasted according to taste	✓	✓	Appr. 30mins	Use dry soybean to make. The ratio of food and water is 1 cup soybean, 1200ml water.
Baby Food	Use for making Baby Food, such as pumpkin and rice paste, purple potato paste	✓	✓	Appr. 30mins	The ratio of food and water is 1:10 total volume can't exceed 1200ml
Smooth soup	Use for making smooth soup, such borsch, fish soup, pumpkin soup.	✓	✓	Appr. 30mins	The ratio of food and water is 1:2. When making fish soup, the whole fish weight less than 300g, water volume is less than 1200ml.
Chunky soup	Use for making Chunky soup, such borsch, fish soup, pumpkin soup.	✓	×	Appr. 40mins	Food and water total volume cannot exceed 1200ml.
Juice	Use for making all kinds of juice.	×	✓	Appr. 2 and a half mins	Food and water total volume cannot exceed 1600ml.

Function introduction	Function Guild	Heat	Blend	Working hours	Food ratio description
Smoothie	Use for making all kinds of fruit smoothie	×	√	Appr. 2 and a half mins	Food ratio need to refer recipe, when make smoothie to add some different fruit and vegetable is perfect (total volume cannot exceed 700ml)
Shake	Suitable for all kinds of fruit and vegetable shake.	×	√	Appr. 1 mins	The proportion of food refers to the recipe. It is better to match various fruits and vegetables when blending smoothies.(The total amount of food should not exceed 1200 ml)
Grind	Use for grinding food to powder, such as bean and coffee bean etc.	×	√	Appr. 2 and a half mins	Food volume is 500ml, if foods is not mixed, need to use mixing bar to help.
Preset	If you prepare soy milk 6 hours in advance, first select the soy milk function button – press the "PRESET" button and select the "+" or "-" button to adjust the time to 6 hours – press the "START/ CANCEL" button – then the machine enters the work mode (the machine will automatic start the soy milk program after 6 hours)				
MANUAL	Turn on the power, press "MANUAL" to select "+" or "-" button to adjust the required stirring speed, then press "MANUAL" to switch the time adjustment, select "+" or "-" to adjust the required mixing time. Press the "START/CANCEL" button (the machine starts working)				
Pulse / Clean	For quick cleaning of the inside of the cup, and hard food initial grinding, etc.	×	√	According to actual needs	It is recommended that 1000ml of water, press and hold for 10 seconds,repeat twice.
Start / Cancel	Used to start or stop working				

<p>Preset function selection (Soy milk/ Baby food/ Smooth Soup/ Chunky Soup/ Juice/ Smoothie/ Shake/ Grind)</p>	<p>Turn on the power, first press the "START/CANCEL" button to start the machine, then press the "Menu" button to select preferred function (eg. Soy milk), press the "START/ CANCEL" button again, then the machine starts to work. After this function is completed, the machine will stop automatically. Press and hold the "START/ CANCEL" button to cancel the current operation during the work.</p>
<p>Preset (example: make soy milk after 6 hours)</p>	<p>If you prepare soy milk 6 hours in advance, first select the soy milk function button, press the "PRESET" button and select the "+" or "-" button to adjust the time to 6 hours – press the "START/ CANCEL" button– then the machine enters the work (the machine will automatic start the soy milk program after 6 hours). Press and hold the "START/ CANCEL" button to cancel Preset function.</p>
<p>MANUAL</p>	<p>Turn on the power, press and hold the "START/ CANCEL" button to start the machine, press "MANUAL" to select "+" or "-" button to adjust the required stirring speed, then press "MANUAL" to switch the time adjustment, select "+" or "-" to adjust the required mixing time. Press the "START/CANCEL" button (the machine enters the work)</p>
<p>Pulse/Clean</p>	<p>Turn on the power, press and hold the "START/ CANCEL" button to start the machine, press and hold the "Pulse/Clean" button, then the machine is working, while leave the button, the machine stop.</p>

Tips: After Soy milk/ Baby Food/ Smooth Soup/ Chunky Soup program is completed, it will keep warm at about 60°C for 4 hours

Operation:

1. Cut the food into pieces and the size about 2 cm (meat cut strips to remove tendon). (see Figure 1)
2. Use the measuring cup to refer to the proportion of the recipe to measure the food. (See Figure 2)
3. Pour the food into the jar (please note that there should be no other unwanted material). (See Figure 3)
4. Add appropriate water to the jar (the amount of water should be exceed max. mark). (See Figure 4)
5. Align the buckles on both sides of the lid with the cup lugs, press the lid into the jar, rotate the lid clockwise and fasten the cup, and then rotate the steam cap clockwise down on the lid. (The machine has a cover protection device, such as the cup cover is not screwed in place, the product will not be operated). (See Figure 5)
6. Place the jar in the correct position on the main unit. (See Figure 6)

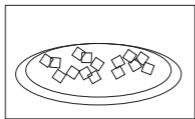


Figure 1

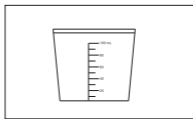


Figure 2

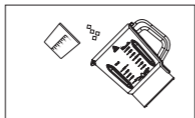


Figure 3

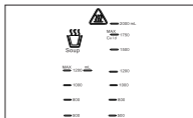


Figure 4

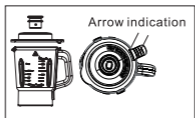


Figure 5



Figure 6

7. Plug in the power cord, and when the power is turned on, a beep will sound and the "START/CANCEL" button indicator will flash. (See Figure 7)
8. Press the "START/CANCEL" button, then press the "Menu" button to select to the required program menu, such as the "smooth soup" function, press the "Menu" button continuously to switch to "smooth Soup". The indicator light flashes. (See Figure 8)
9. Press the "START/CANCEL" button and the machine starts to work (The sound could be fast and slow during the work, which is normal). (See Figure 9.)
10. The machine will buzzing and the display returns to standby when the work is completed. (See Figure 10.)
11. Unplug the power cord and remove the glass cup to open the lid (Be careful the hot steam when opening the lid). (See Figure 11.)
12. Pour out the soup/beverages and add seasoning according to your taste (Do not over-rush when pouring out the soup/beverages to prevent liquid splash). (See Figure 12.)



Figure 7

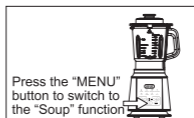


Figure 8



Figure 9

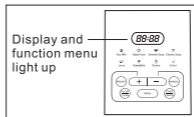


Figure 10



Figure 11

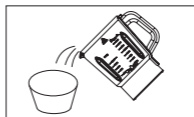


Figure 12

13. Clean the inside of the glass cup in time and clean the outer casing with a damp cloth. (See Figure 13)
14. After wiping the water stain on the surface of the machine, separate the glass cup from the main unit in a cool, ventilated place to prevent odor. (See Figure 14)

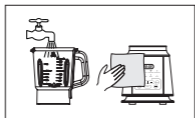


Figure 13

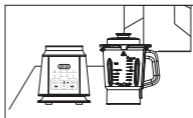


Figure 14

Attention:


1. You must select the corresponding function button to make grains milk, smooth soup, etc. Otherwise, the prepared beverage will have a bad taste and cannot be cooked. In severe cases, it will cause overflow or overcooked of the bottom.
2. If there is a malfunction of "Soymilk" "Smooth Soup" function, you need to switch functions, please press "START/ CANCEL" button to cancel the current function. You can directly update the corresponding function before entering the countdown. Then press the "START/CANCEL" button to start. If you have entered the countdown, it is recommended to change the food and then re-select the correct function to start.
3. The amount of food in the recipe is equipped according to the standard water level. When using the product, please adjust the total amount of the food according to the amount of water and the type of food. The heating function should not exceed 1200 ml, and the function of cold drink should not exceed 1750 ml.
4. When making fruit and vegetable drinks, you are advised to remove the seeds of fruits before placing them in a mixing cup and adding proper amount of drinking water or milk.
5. Do not use this product to directly heat the thick liquid such as milk, soy milk, cold smooth soup, etc., otherwise it will cause overcooked of the bottom, then produces burnt smell.
6. During the operation, please note that the liquid in the jar is boiling, please be careful that the spout sprays water vapor and hot water. Do not open the lid during working .
7. Do not add seasonings (such as sugar, brown sugar, etc.) to the cup during the machine is working that prevent the seasoning from sticking to the bottom of the jar when heated.
8. Before turning on the power, make sure to put the jar, lid and steam cap in place.
9. When the product is in operation, it is strictly forbidden to put your hand or sharp hard objects into the mixing cup to avoid injury to man or damage to product.

Cleaning and maintenance

Cleaning

1. Power off before cleaning.
2. Please clean after the glass jar cooled down to protect from scalding.
3. When cleaning, please take care of the sharp blades to hurt you.
4. Do not use chemicals to clean such as alcohol.
5. When cleaning the surface, please use the soft cloth. Do not use steel wool, stiff brush etc. stiff tool to clean the surface.
6. Do not immerse machine body, glass jar, power cord or any electrical components into water.
7. Please do not use water to pour the machine body and the bottom off the jar.
8. After cleaning, please use dry cloth to clean left water and put into the cold ventilation to dry up.
9. Do not put product, power cord and packaging etc. under direct sunlight.
10. When the ingredient in the glass jar becoming gelosis is hard to clear, please put some water into the jar and clean it after 0.5 to 1 hour. When clean the bottom heating plate for many times, there is a brown color layer at the bottom. Put water into the jar for long time and use the hard cloth with some vinegar to wipe.

Clean demonstration

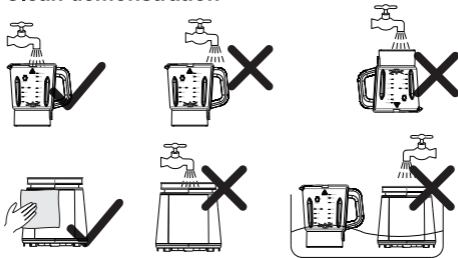

Trouble shooting

Phenomenon	Cause	Shooting
Indicating light is not "ON"	<ul style="list-style-type: none"> Power cord is not well inserted to the socket 	<ul style="list-style-type: none"> Inspect the power cord and well insert.
Indicating light is lighting but product is not working.	<ul style="list-style-type: none"> After select functions, but do not press the Start button. 	<ul style="list-style-type: none"> After selection the function and press Start/stop button.
Alarming during working	<ul style="list-style-type: none"> Food got stick. No water in the jar. 	<ul style="list-style-type: none"> Clean the jar inside before using. Put water to the correspondent water level.
Heating can't be stopped.	<ul style="list-style-type: none"> Product is defective. 	<ul style="list-style-type: none"> Call for the service center.
No respond after button pressing.	<ul style="list-style-type: none"> The time of power off is too short to recover for the product system. Product is on working process. 	<ul style="list-style-type: none"> After 3mins power cut off before using. Normal phenomenon
Ingredient can't be crushed	<ul style="list-style-type: none"> Water is too much or too less. Ingredient is too much or too low. Voltage is too low. Product have problem. 	<ul style="list-style-type: none"> Add water to the right volume level. To operate according to the recipe ratio. Send product to the after-sales service.
Heating plate got stick	<ul style="list-style-type: none"> Jar inside is not fully cleaned. Ingredient is too much. Wrong press the functional button. 	<ul style="list-style-type: none"> Clean the jar inside before using. To operate according to the recipe ratio. Select the right functional button.
Abnormal noise	<ul style="list-style-type: none"> Run-in period 	<ul style="list-style-type: none"> Occasionally noise is normal.
Display indicates E1.	<ul style="list-style-type: none"> No lid onto the jar. Machine is defective (Sensor is off) 	<ul style="list-style-type: none"> Put the lid onto the jar. Sent machine to the after- sales service.
Display indicates E2	<ul style="list-style-type: none"> Dry burning. Machine is defective (Sensor is short circuit). 	<ul style="list-style-type: none"> Set the recipe ratio according to the recipe requirement. Sent machine to the after-sales service.

Technical parameters

Product Name	Multi-Functional Cool and Heat Blender
Product model	GHBL800
Power	800W
Heating Power	800W
Voltage	220V~
Rated frequency	50Hz

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return the device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



感謝您購買本產品。在使用前，請您詳細閱讀本說明書，正確地掌握本產品的使用方法，以便充分利用它的優異性能，相信它會給您和您的家人的生活帶來方便與舒適。

目錄

1. 安全使用說明	18
2. 產品使用細則	19
3. 零件示意圖	21
4. 操作面板與說明	22
5. 保養和維護	28
6. 故障檢查與處理	29
7. 技術參數	30

安全使用說明

 嚴禁：禁止引起人身危險、受傷、其他一切損失的風險

 警告：警告引起人身危險、受傷、其他一切損失的風險

 注意：注意對導致人身受傷或物品損害的風險。

 注意			
	請勿在同一個插座上使用高電流電器。 		接駁220V/50Hz電壓供應。 
	請勿使用破損電源線，慎防觸電。 		請勿在手濕情況下觸碰電器，以免發生漏電。 
	在插上或拔去電掣時，請勿以電源線強行拉走。 		在機器運作時，萬一遇上火警，請立即拔去電掣。 
	如果電源線受損，請諮詢專業資格人士、廠商或代理中心更換電源線，以免造成意外。		
	請勿用水沖洗或浸過機身。 		切勿把機器放近火源或其他高溫環境(攝氏40度或以上)。 
	把機器放在平坦及堅固的平面上，與周圍物件保持距離。 		在拔掉或插上電掣前，請把機器暫停運作並把電源關掉。 
	在機器運作時，請勿觸碰杯身，避免燙傷。 		在倒水時，請保持在杯身量度指示的最高與最低之間。 
	製作完成後，請先切斷電源再取出杯身。 		在清洗時，請小心杯內刀片割傷手指/手部。 
	請勿把機器放入冰箱，先把機器清潔，保持乾拭後再存放。 		

產品使用細則

嚴禁

 
1. 本產品僅適用於個人或家庭使用。產品禁用於商業用途。使用者必須按照說明書的指引下使用，切勿在未經指引下隨意改裝機器；
2. 嚴禁將主機和杯身放進水或其他液體中，也不能在水或其他液體下沖洗，以防止漏電或令其他零件損壞。
3. 嚴禁將本產品靠近高溫、易燃易爆氣體（如天然氣、石油氣等），以防引起機件損壞、故障或火災。

警告

1. 使用前，請仔細閱讀說明書中各項說明，如有疑問或不清晰，請聯絡銷售中心或客服中心。
2. 請參照說明書、食譜，選擇相應的功能以及食材比例。
3. 使用前，請確保所使用電壓和標籤上的電壓一致。
4. 如果電源線損壞，為避免危險，請聯絡本公司客戶服務部門，或直接到本公司指定地點更換，切勿自行修理。
5. 使用時應放在小孩不易觸及的地方。切勿讓肌體不健全、感官或精神上障礙、缺乏相關經驗和知識的人（包括兒童）使用或玩耍本產品。
6. 機器運作過程中，嚴禁觸碰刀片、摩打等可動部件，以免造成傷害或使產品受損。
7. 切勿使用非本公司提供的關於該產品型號的配件（如玻璃杯、杯蓋等），以免發生危險。
8. 在拆卸玻璃杯部份的零件前，先確保電源已關閉。
9. 請勿接觸本機溫度較高的地方，接觸溫度較低部份如把手及控制版面。
10. 加熱模式時，不要觸碰玻璃杯，以免被燙傷。
11. 在進行清潔前，請先把產品冷卻。
12. 放入的食材及水總容量不可超過玻璃杯上標示的最大刻度。
13. 在機器運作過程中，請勿提起杯身或打開杯蓋，以免造成危險。

14. 在運作過程中，請勿移動機器，避免食材溢出，造成燙傷、觸電。
15. 在攪拌完畢後，須待摩打和刀片停止轉動，並確保關閉電源情況下，再取出杯身。
16. 在製作果蔬類汁時，杯蓋有可能被染色，此乃屬於正常現象，對人體健康無害。
17. 本機採用高轉速摩打，攪拌時可能會出現間歇的聲音乃屬正常現象。
18. 如在製作過程中產品停止工作，有可能是安全溫控過熱保護造成，此時可斷開電源，冷卻20-30分鐘後再使用。
19. 產品機身的把手及耦合器不可進水，若果進水，請務必在乾拭後才可使用。
20. 切勿將本機及部件放入微波爐中使用。
21. 切勿在沒有放入任何材料前開啟本機，以免減少本機使用壽命。
22. 切勿將本機用於說明書以外的其他用途。
23. 切勿用濕手插入/拔去電源插頭，以免觸電。
24. 切勿在無人看管的情況下使用本機。
25. 在製作熱飲品時，請確保攪拌杯及杯蓋已蓋好，請勿觸碰攪拌杯以及杯蓋，避免燙傷。
26. 請在平面上使用本機，切勿在地毯毛巾、塑膠、紙等易燃物上操作。
27. 請勿使用本機以外的配件和零件，以免引起火災和人身傷害。
28. 本產品加熱時，小心蒸氣口噴出的蒸氣燙傷。
29. 請勿將本機和其他配件放入消毒櫃、洗碗機中清洗，以避免在消毒過程中令本機變形損壞。
30. 如電源線損壞，為了避免危險，請通知維修中心或有關專業人士更換。
31. 在更換或移動部件前需要關掉電源
32. 處理鋒利的切割刀片，倒空碗和清潔過程中應格外小心。宜戴上手套，否則用力過大可能會造成嚴重傷害。
33. 在組裝，拆卸或清潔設備或無人看管的情況下，請務必斷開本機的電源。
34. 本機不適合肢體、感官、心理能力較弱或缺乏經驗和知識的人士使用，需進行安全使用方法的監督或指導，並明白其潛在危險性。


部件示意圖

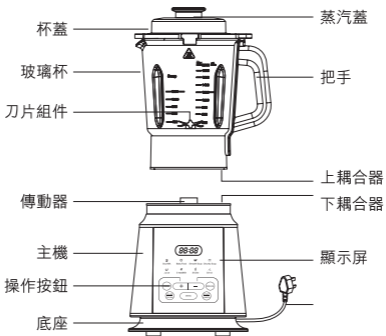

清潔刷




 量杯



攪拌棒

 操作面板與說明

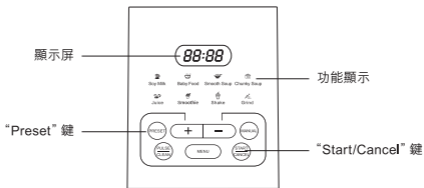

食物指南對照表：

功能指示		加熱	攪拌	工作時間	食物比例說明
功能介紹					
豆漿 Soy milk	用大豆製作， 根據口味調整份量	✓	✓	約30分鐘	用乾大豆製作，食物和水的 比例是1杯大豆：1200毫升水
嬰兒食物 Baby food	用於製作米糊， 可加南瓜、紫薯	✓	✓	約30分鐘	食物和水比例是 1: 10， 總量不可超過1200毫升
濃湯 Smooth soup	用於製作濃湯， 如魚湯，南瓜湯	✓	✓	約30分鐘	食物和水的比例是1:2。 當製作魚湯時，若整條魚的 重量少於300克，水總量需要 少於1200毫升。
魚湯 Chunky soup	用於製作魚湯， 如羅宋湯，魚湯	✓	×	約40分鐘	食物和水的總容量不可超過 1200毫升。
果汁 Juice	用於製作不同飲料， 如手搖飲品	×	✓	約 2.5分鐘	食物和水的總容量不可超過 1600毫升。

功能介紹	功能指示			工作時間	食物比例說明
	加熱	攪拌			
冰沙 Smoothie	用於製作各款柔軟 水果冰沙	×	√	約 2.5分鐘	食物比例需根據食譜， 當沙冰加入水果和蔬菜後 (總容量不可超過700毫升)
奶昔 Shake	適合所有種類 水果和蔬菜奶昔	×	√	約1分鐘	食物比例視乎食譜。 建議混合攪拌不同水果和 蔬菜。(總容量不可超過 1200毫升)
研磨 Grind	用於研磨食物至 粉狀，如豆、 咖啡豆等	×	√	約 2.5分鐘	食物容量是500毫升， 若食物未能徹底混合， 可用攪拌棒輔助。
預約 Preset	如需要提前6小時準備豆漿，首先選擇功能鍵——按「預約」鍵及 選擇「+」或「-」掣調校時間到6小時——按「啟動/停止」鍵—— 然後機器會進入運作模式(機器會自動在6小時後開始製作豆漿。)				
自訂 MANUAL	開啟電源，按「Manual」選擇「+」或「-」掣調校需要攪拌速度， 再按「Manual」調節時間，選擇「+」或「-」掣調校需要的混合時間。 按「啟動/停止」鍵(機器則會運作)				
瞬轉/清洗 Pulse / Clean	快速清洗杯內較 頑固食物等	×	√	視乎 實際需要	建議倒入1000毫升水， 然後按住10秒清洗， 重複兩次
啟動/停止 Start / Cancel	用作啟動或停止使用本機				

預設功能選擇 (豆漿/嬰兒食物/ 濃湯/魚湯/果汁/ 沙冰/奶昔/研磨)	先按「啟動/停止」鍵啟動機器，接著按「功能(Menu)」鍵，選擇所需功能例如「豆漿」功能，再按「啟動/停止」鍵，機器開始工作，待完成此項功能後，機器會自動停止；工作過程中，長按「啟動/停止」鍵即可取消當前操作。
預約	如需要提前6小時準備豆漿，首先選擇豆漿功能鍵—按「預約」鍵及選擇「+」或「-」掣調校時間到6小時—按「啟動/停止」鍵—然後機器會進入運作模式（機器會自動在6小時後開始製作豆漿。）長按「啟動/停止」鍵即可取消當前操作。
自訂	接通電源，先按「啟動/停止」鍵啟動機器，按「Manual」選擇「+」或「-」掣調校需要攪拌速度，再按「Manual」調節時間，選擇「+」或「-」調校需要的混合時間。按「啟動/停止」鍵機器則會運作，長按「啟動/停止」鍵即可取消當前操作。
瞬轉/清洗	接通電源，先按「啟動/停止」鍵啟動機器，長按住「瞬轉/清洗」鍵，功能啟動後，停止按鍵即可停止工作。

溫馨提示：帶有加熱功能的程式，在結束工作以後，自動進入保溫狀態（保溫溫度為60°C，保溫時間為4小時）

使用步驟：

1. 將食物切成約2cm大小的塊狀（肉類切條去筋）。（見圖1）
2. 使用量杯參照食譜比例量取食材。（見圖2）
3. 將量好的食材加入玻璃杯中（請注意玻璃杯內不應有其他異物）。（見圖3）
4. 將適量的清水加入玻璃杯中（總水量不應高於MAX位置）。（見圖4）
5. 把杯蓋壓入玻璃杯並固定杯子，以順時針扭蓋直至扣環與杯耳對齊，然後再放下蒸氣蓋在杯蓋子上。（機器設有杯蓋保護裝置，例如杯蓋仍未扣緊到位，產品將無法使用）。（見圖5）
6. 將玻璃杯按正確的位置放到主機上。（見圖6）

 


圖1

 


圖2

 


圖3



圖4

 


圖5



圖6

7. 插上電源線，當接通電源時，會發出「嘩」一聲，然後「啟動/停止」鍵指示燈會閃爍。（見圖7）
8. 按下「啟動/停止」鍵，再按下「功能」鍵切換至所需的程式功能表，例如「濃湯」功能，可連續按「功能」鍵切換至「濃湯」。指示燈會閃爍。（見圖8）
9. 按下「啟動/停止」鍵後機器會開始運作（運作中會有忽快忽慢的聲音，此乃屬於正常現象。）（見圖9）
10. 當機器完成工作後，會發出蜂鳴提示，顯示屏會回到待機狀態。（見圖10）
11. 把電源線拔去，取下玻璃杯打開杯蓋（打開杯蓋時注意湧出蒸汽防止燙傷）（見圖11）
12. 倒出製成品，依據個人口味加入調味料（切勿過急倒出製成品，以防液體濺出）。（見圖12）



圖7



圖8



圖9

 


圖10



圖11

 


圖12

13. 及時清洗玻璃杯內部，並用濕布清潔產品外殼。（見圖13）
14. 在擦拭機器表面水漬後，將主機與玻璃杯分開並保持在通風處風乾，以防產生異味。（見圖14）

 


圖13

 


圖14

注意：

 
1. 你必須選擇相應功能鍵去製作粥、豆漿等食物，否則，製作出的食品會影響口感甚至無法完成，更嚴重的情況會出現溢出或燒焦底部。
2. 如在製作過程發生故障，你需要轉換功能，請按「啟動/停止」鍵取消當前功能。你可以在倒數時間前直接更改相應功能，然後按「啟動/停止」鍵繼續。如你已進入倒數時間，建議更換食材和再選擇正確的功能後再次啟動。
3. 根據標準水分分配食譜中的食材份量。當使用產品時，請根據該款食材和所需水量調節適當的份量。在製作熱飲時不可超過1200毫升，而冷飲則不可超過1750毫升。
4. 在製作水果類飲料時，請預先清除水果核後方可放入攪拌杯，並加入適量水或牛奶。
5. 切勿把本產品加入清水以外之液體，如牛奶、豆漿、濃湯等，否則會造成燒焦底部的情況，繼而產生異味。
6. 在製作過程中，請注意玻璃杯內的液體在沸騰時，小心噴出水蒸氣和熱水。切勿在製作時打開杯蓋。
7. 在製作過程中，不要加入調味料(例如：糖，紅糖等)到杯中，以防調味料黏附在底部。
8. 在接通電源前，請確保玻璃杯、杯蓋及蒸氣蓋安裝在正確位置。
9. 產品在運作時，嚴禁將手或尖銳等硬物伸入玻璃拌杯內，以免造成人為受傷或產品受損。

保養和維護

清洗儲存須知：

1. 清洗前，必須拔掉電源。
2. 請待玻璃杯冷卻後清潔，以免燙傷。
3. 清洗前，請注意鋒利的刀片，小心劃傷。
4. 不可使用化學藥品，如酒精等進行擦拭。
5. 清洗產品去面時，請使用軟布清洗，不可使用鋼絲球、硬刷子等硬工具清洗產品表面！
6. 不可把主機、玻璃杯、電源線等浸入水中，以免損壞帶電部件。
7. 不可沖水到主機以及玻璃杯底部。
8. 清洗時，請用乾布擦拭殘留水漬，並放在通風涼處風乾。
9. 請勿將產品、電源線及包裝附件等放於太陽下曝曬。
10. 當玻璃杯內的呈膠凝狀態難以清洗時，請加水在玻璃杯中使其浸在水中，待0.5 - 1小時軟化後，再嘗試擦拭乾淨。
11. 當不銹鋼發熱盤底部多次清洗不到時，在底部會積聚有淺褐色的表層。此時，可用清水浸一段時間，加入清潔劑在硬布上，再擦拭乾淨。

清洗示範

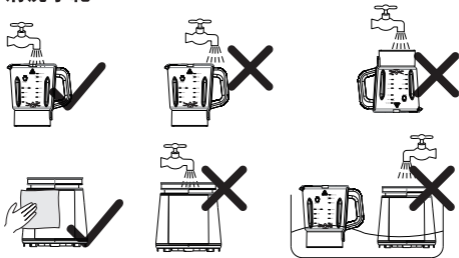

故障檢查與處理

現象	原因	處理方法
指示燈不亮	<ul style="list-style-type: none"> 電源線插頭未插好 	<ul style="list-style-type: none"> 檢查電源線插頭並保證插好
指示燈亮，產品不工作	<ul style="list-style-type: none"> 選功能後，未按啟動鍵 	<ul style="list-style-type: none"> 選好功能後，再按下「啟動/停止」鍵
工作過程中出現警報	<ul style="list-style-type: none"> 食物燒底 杯內未加水 	<ul style="list-style-type: none"> 請將杯內清洗乾淨再使用 請正確加水到相應水位線
加熱不停止	<ul style="list-style-type: none"> 產品本身故障 	<ul style="list-style-type: none"> 送當地售後服務部維修
按鍵無反應	<ul style="list-style-type: none"> 斷電時間短，系統未重置 產品已在執行程序 	<ul style="list-style-type: none"> 關閉3分鐘後再通電使用 工作進行中，屬正常現象
食材打不碎	<ul style="list-style-type: none"> 加水過多或過少 食材過多或太少 產品本身故障 	<ul style="list-style-type: none"> 請加水至正確的水位線 可用家用攪壓器 請按食譜配方操作 送當地售後服務部維修
燒底	<ul style="list-style-type: none"> 杯內未清洗乾淨 食材加太多 按錯功能鍵 	<ul style="list-style-type: none"> 請將杯內清洗乾淨再使用 請按食譜配方操作 選擇正確的功能鍵
異常哨聲	<ul style="list-style-type: none"> 產品磨合 	<ul style="list-style-type: none"> 偶有哨聲屬於正常情況
機器顯示E1	<ul style="list-style-type: none"> 杯蓋未蓋好 機器本身故障(傳感器開路) 	<ul style="list-style-type: none"> 請蓋好杯蓋 送當地售後服務部維修
機器顯示E2	<ul style="list-style-type: none"> 乾燒 機器本身故障(傳感器短路) 	<ul style="list-style-type: none"> 請按照食譜要求確認配置食材比例 送當地售後服務部維修

技術參數

產品名稱	多用途冷熱料理攪拌機
產品型號	GHBL800
電動功率	800W
加熱功率	800W
額定電壓	220V~
額定頻率	50Hz

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return the device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



請記錄下列產品資料

- 型號 _____
- 機身編號 _____
- 經銷商名稱 _____
- 購買日期 _____

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

ToolBox Customer Service Centre 客戶服務中心：
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong
香港九龍灣啟祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210
Service E-mail 電郵地址：8210service@gilman-group.com
Please register now at 請即上網登記：www.toolbox.hk
Website 網址：www.gilman-group.com



Proudly Serviced by:



太平家庭電器

