

gemini
ITALY

Multi-functional Breakfast Maker

多功能早餐機

MODEL NO.型號：GMC2V

Before using your product for first time, please read this instruction manual.

在使用本產品前，請仔細閱讀本說明書並保存好。

 
SAFETY INTRUCTIONS

1. Please read these instructions carefully and retain them for reference.
2. This appliance is not intended for use by persons (including children under 8 years old) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
4. Use this appliance solely in accordance with these instructions.
5. Never use the appliance outdoors and in a humid room.
6. Before use, ensure the power supply same as indicate at the appliances. The power supply should has earth wire.
7. Appliances should place at a stable platform and keep away from children.
8. When power cable damages, please contact service center for replacement. Do not replace it by own .
9. Any faulty operation, must turn off the power and unplug the power supply. Do not unplug while your hand is wet, it will cause electric shock.
10. Do not pull the cable along sharp object / sharp edges, crimp the wire or let it hang down. Also put away from hot and wet condition. Do not insert any metal object into to the heat dissipation holes / gaps, otherwise it cause electric shock.
11. Do not place the product on the surface or beside extreme heat condition, such as oven etc.
12. It is forbidden to use this product on an unstable / inclined platform to avoid accident such as injury or fire cause by products falling over.
13. Keep away from children or in-experienced person to operate this products.

14. While in process, it is normal the pot body is always hot when pouring water or soup out, please lift the pot by hold the handle. Do not touch the pot body with hands directly, this would get hurt.
15. Please keep the surface of the heating plate clean. After using it for a period of time, you need to clean the dirt on the surface of the heating plate.
16. Do not allow liquid to flow into the product during cleaning, and to avoid danger do not allow the power cord, plug, main body, etc. to dip in the water.
17. The accessories is specially designed ONLY for this product and cannot be used on a naked flame.

 
PRODUCT REVIEW

 
 
This unit is for HOUSEHOLD USE ONLY

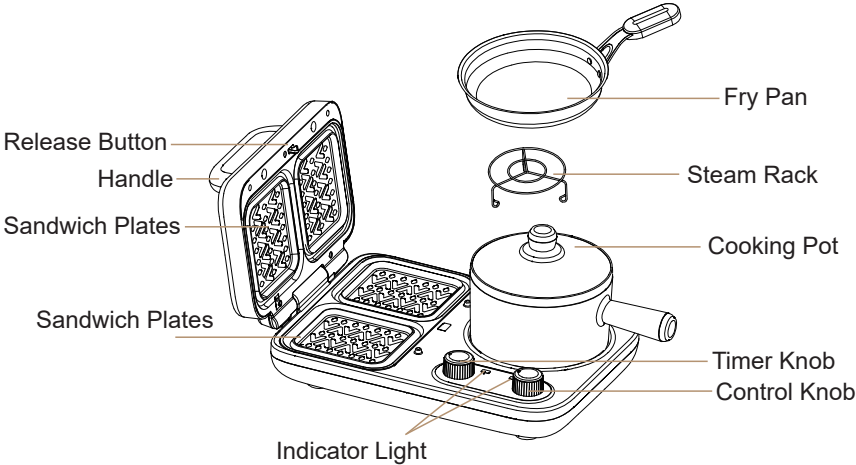

Note :
The picture is for reference only, assemblies maybe different from the picture.

PANEL INSTRUCTION

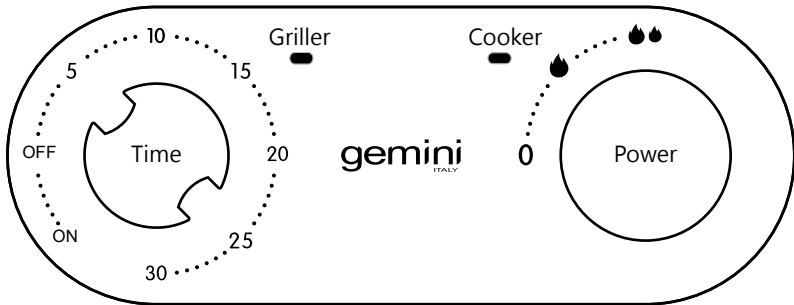

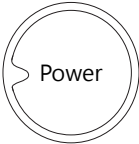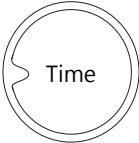	<p>Cooker control knob :</p> <p>The power can be adjusted according to the user's demand, and different power can be selected : High and Low power , "COOKER" indicator light will ON. When the knob is adjusted to "0", the power is off , and the indicator light is off. When the knob is adjusted to "🔥" or "🔥🔥" the cooker is turned on. At this time, the heating plate works, and the indicator light of the heating plate is on. (this light is related to the heating plate, but not to the griller).</p>
	<p>Griller timer adjustment knob</p> <p>Adjust the knob according to desired time, the optional range is 0-30 minutes or Keep heating (ON).For first time use, the knob is adjusted to "OFF", the griller is in the power-off state, and the griller indicator light is not on. When the knob is adjusted to select other time or Keep heating(ON), the griller is connected to the power, and the "GRILLER" lights are on when the heating plate is working, the griller indicator light is on (this light is related to the griller, but not to the cooker).</p>

Tips :

The cooker and the griller are controlled by control knob and timer knob separately , hence they work separately and are not affected by each other.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug the power plug and wait for the product to cool completely.
2. The inner and outer surface, fry pan and cooking pot of the product can be cleaned with soft cotton cloth or sponge dipped with neutral detergent, and then cleaned with clean water.
3. It is not allowed to use hard brushes and articles to wash and scrape, so as to avoid damaging the inner surface of products and the protective layer of grill plates, cooking pot and frying pan.
4. Do not use gasoline, thinner, polishing agent and other toxic and corrosive cleaning agents for cleaning.
5. Before using the product, the cleaned parts must be clean and then plugged in.
6. It is strictly forbidden to immerse the main body of the product in water and other liquids.

Common problems and analysis

Warning:

If the following abnormal phenomena occur during use, it is not the fault of the machine. Please check it carefully before sending it out for maintenance.

Fault phenomenon	Potential reason	Suggested method
Indicator light not ON	Power failure	Check and maintain power supply equipment
	The power socket has no power or poor contact	
	The power supply voltage is not consistent with the rated voltage of the product	
The cooking time is too long	Is the food fried directly without thawing	The food need thawed before cooking
Uncooked / scorched food	The selected temperature or time is not correct	Set proper cooking temperature and time
There is a peculiar smell	Fried and roasted food without baking plate	Place the food on a baking plate and cook it
	Foreign objects on plate or heat element plates	Clean the foreign objects

Notice:

If you still cannot solve these abnormal phenomenon after analyzed above problems, please contact with service department. It is strictly forbidden for non-professionals to disassemble the machine.

SPECIFICATIONS

Model No.: GMC2V

Mains Voltage & Frequency: 220-240V ~ 50-60Hz

Power: 1500W(Griller 800W, Cooker 350-700W)

Capacity: 0.8 liters Max. (cooking pot)

Product Dimension:

445(W) x 200(H) x260(D) mm (With cooking pot)

449(W)x130(H)x260(D)mm (With the frying pan)

***The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.**

 
安全指引

1. 請於操作前詳閱操作指引,避免使用不當而造成損壞或危險。
2. 8歲以下兒童、傷健人仕、精神及感官受到影響及缺乏操作常識和經驗者，不適宜獨立操作此產品。如需操作需要有相關人仕從旁指引及對其行為安全負責。
3. 如本產品出現問題，請聯絡代理商或合資格人仕處理，不要自行進行維修以免發生危險。
4. 請遵循從本產品上的規格表資料連接電源。
5. 本產品只適用於家居室內操作，並不適用於商業用途及不要在濕度高的室間內使用。
6. 使用前請確保插座的接地有效，同時請確認輸入電壓為220-240V~50-60HZ。
7. 如電源線損壞時，請聯絡維修部安排更換。
8. 操作旋鈕時不可用力過猛,以防旋鈕損壞。
9. 在使用過程中，若發生問題時，請先將電源插頭從插座上拔下；請勿濕手拔/插插頭，以免觸電。
10. 請勿以尖端物或鋒利邊沿來壓著線或讓它懸垂下來，同時要遠離熱源和濕源。
11. 不要將金屬等異物插入散熱孔或間隙中，否則可能導致電路損壞。
12. 切勿將本產品放置在帶熱源的表面上或熱源旁，如焗爐等。
13. 禁止放置在不平或傾斜的枱面上使用本產品,避免產品容易傾倒引起傷害或火災等事故。
14. 不要在地毯、塑膠凳這些不耐熱的表面或者附近使用，會因熱力及蒸氣受損的物體不要放置在本產品上方。
15. 本產品不適用於兒童、精神病患者或缺乏經驗的人使用或把玩本產品。
16. 產品使用過程中，其機身變熱是一種正常現象,當倒水時，請拿起手柄來提起鍋身，切勿用手接觸鍋身的高溫表面，以免燙傷。
17. 若產品出現乾燒情況，冷卻後請往鍋內加水或拔掉電源,切勿觸摸發熱體以防燙傷。
18. 請保持產品發熱盤表面清潔,使用一段時間後，需清理發熱盤表面的污垢。
19. 產品使用時，會產生熱力及蒸氣從蒸氣口噴出，這容易引起燙傷，請務必小心。

20. 清洗時請勿讓液體流入產品內部，也不可將電源線、插頭、整機等浸入液體裏，以免發生危險。
21. 產品只能烤製適合的食物，不得將大塊食物或金屬物品放入烤盤裏進行烤製，以免產生火災或危險。
22. 將產品放置隔熱的平面上使用，應該注意遠離熱源或易燃物（如窗簾等類似物品），並在產品四周保持至少15cm的距離，與其它電器產品隔開30cm以上的距離。
23. 早餐機煮食時，烤盤、煮鍋應有食物或液體，請不要乾燒，否則產品會降低使用壽命。
24. 煮鍋使用過程中容量不可超過最大水位或低於最小水位標誌，否則會影響產品加熱效能。
25. 產品的配件僅限隨主機配合使用，嚴禁作為它用。

 
注意！ 此產品只適合家庭用途。

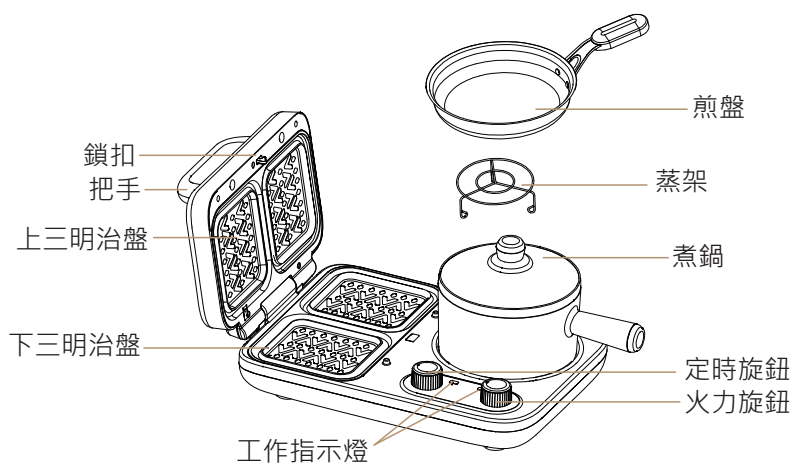

 

部件示意圖



注意:如產品圖片與實物略有不同,請以實物為準。

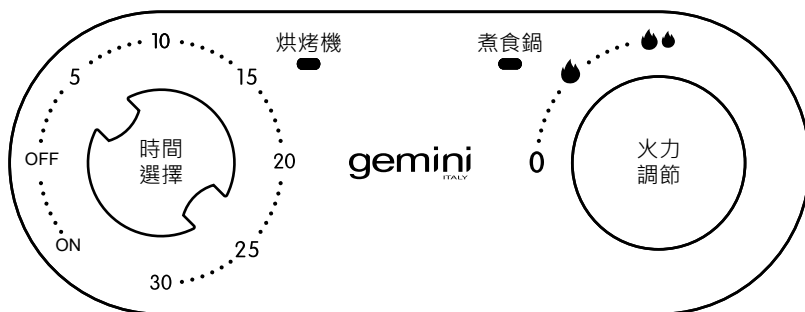控制面板:



 <p>火力調節</p>	<p>煮鍋/煎盤火力調節旋鈕和工作指示燈:</p> <p>根據使用需求調節此旋鈕，可選擇不同的火力，分為大火和小火，兩種火力選擇。此旋鈕調節至“0”，發熱盤處於待機狀態，煮食鍋盤指示燈不亮，當調節此旋鈕選擇為“”或“”時接通煮食鍋，此時煮食鍋工作，煮食鍋指示燈亮(此燈與煮食鍋相關，與烘烤機不相關)。</p>
 <p>時間選擇</p>	<p>烘烤機時間調節旋鈕和工作指示燈:</p> <p>根據使用需求調節此旋鈕，可選擇不同的烤製時間，可選範圍為0-30分鐘或長通。當產品插頭接通電源後，此旋鈕調節至“關閉”時，烘烤機處於斷電狀態，烘烤機指示燈不亮，當調節此旋鈕選擇其他時間或長通時接通烘烤機電源，此時烘烤機工作,烘烤機指示燈亮(此燈與烘烤機相關，與煮食鍋不相關)</p> <p>溫馨提示:當烤食物所需時間少於10分鐘時，首先把定時器旋過10分鐘後再往迴旋到所需時間位置。</p>

煮食鍋和烘烤機分別靠一個火力開關和一個定時器控制加熱，所以它們之間是單獨工作，不受其中的影響。

煎盤/煮食鍋部分使用指南：

1. 接通電源，機器處於待機狀態；
2. 把煮鍋或煎盤放置在發熱盤頂部；
3. 將火力開關調節到需要的檔位，發熱盤開始加熱，此時指示燈點亮。
4. 當煮鍋或煎盤的食物煮好了，手動按旋鈕調到“0”時，煎煮結束，發熱盤停止加熱指示燈熄滅。

烘烤機使用指南：

1. 接通電源，機器處於待機狀態：
首次使用產品前包裝箱內的所有附件、配件全部取出。再將火力開關調到最大，和定時器開關調至10分鐘以除去早餐機上殘留的灰塵和雜質，初次使用時有煙霧冒出，屬正常現象。
2. 把麵包及食材放在下三文治盤，把上殼蓋下，利用鎖扣把上下三文治盤扣緊。
3. 這時把定時按鈕調到需要的工作時間，此時三文治機指示燈點亮。
4. 到設定的時間段時，工作指示燈熄滅，烤盤停止加熱，烤製結束。

保養和維護

1. 在清潔前應先拔掉電源插頭，待產品完全冷卻後方可進行。
2. 產品內外表面、烤盤、煮鍋的清潔可用軟棉布或海綿沾上中性清潔劑擦拭，並用清水抹乾淨。
3. 不得使用硬刷子洗刷刮削以免損壞產品內表面及烤盤、煮鍋、煎盤的保護層。
4. 不得使用汽油、天那水、拋光劑等有毒和腐蝕性清潔劑進行清潔。
5. 使用產品之前必須將清洗的零部件擦幹後再插上電源。
6. 嚴禁將產品主體浸入水等液體中。

常見問題分析

如使用時出現以下異常現象，並不完全是機器出現故障，請在送出維修前，再仔細檢查一次。

故障現象	潛在原因	解決方法
指示燈不亮	停電	檢查並維護供電設備
	電源插座不通電或接觸不良	
	電源電壓與產品額定電壓不符	
煎烤時間過長	食物是否未經解凍直接進行煎烤	食物先進行解凍再進行煎烤
食物不熟/烤焦	所選的烘烤溫度或時間不對	綜合食譜和個人經驗設定煎烤溫度和時間
出現異味	煎烤油脂食品未放置烤盤	將食品放置在烤盤上煎烤
	煎盤、烤盤或發熱盤上有異物	將異物清洗乾淨

經以上現象分析後仍無法排除故障，請與本公司維修中心點 或經銷商聯繫，嚴禁非專業人員對本機自行拆裝。

產品規格

型號：GMC2V

電壓：220-240V ~

頻率：50-60Hz

功率：1500W (烘烤機800W · 煮食鍋350-700W)

容量：0.8公升 (最大) (煮鍋)

產品尺寸:

445(闊)x200(高)x260(深) 毫米 (含煮食鍋)

449(闊)x130(高)x260(深) 毫米 (含煮煎盤)

*相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

請記錄下列產品資料

● 型號

● 機身編號

● 經銷商名稱

● 購買日期

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

ToolBox Customer Service Centre 客戶服務中心：
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong
香港九龍灣啓祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210

Service E-mail 電郵地址：8210service@gilman-group.com

Please register now at 請即上網登記：www.toolbox.hk

Website 網址：www.gilman-group.com

Proudly Serviced by:



太平家庭電器