HDR207042-EKS12108-GSK12TT-Gemini-迪士尼-说明书-2020-8-14 成品尺寸:对折后142.5x210mm,打开285x210mm

Before using your product for first time, please read this instruction manual. 在使用本產品前,請仔細閱讀本說明書並保存好。

20 Use the appliance only to boil or heat water. Never use it for other liquids!

22 Allow the appliance to cool to room temperature before storage.

21 Fill the jug kettle with at least 0.5 litre of water and above the water level 0.5 litre.

23 This appliance may not be used through an external timer or by means of a remote

24 The heating element and kettle body surface are subject to residual heat after use.

25 If the supply cord is damaged, it must be replaced by the manufacturer, its

service agent or similarly qualified persons in order to avoid a hazard.

This unit is for HOUSEHOLD USE ONLY

1 Release the button to open the lid.

switch "I". The on/off blue pilot light will illuminate.

2 Place the jug on the power base, and insert the plug in the wall socket. Push down the on / off

switches off automatically a few seconds after the water has come to the boil. The on/off blue pilot

3 The jug kettle is now switched on, and the water will now begin to heat. The jug kettle

light will now extinguish and switches to OFF "0" position at stop operation.

4 Remove the jug from the power base by the handle, and pour the water out.

5 Remove the plug from the wall socket when you have finished using the jug kettle.

4 單獨使用符合額定電源的電源插座,不使用時,從電源插座上拔下電源插頭,若與其他 1 Remove the plug from the wall socket, and allow the appliance to cool. 閱讀下列說明事項並請妥善保管,以供日後參考。 部件示意圖 電器產品共用,可致發熱,發生火災。 SAFETY INTRUCTIONS Be careful you do not contact the hot water. It can cause serious burning wounds. 2 The jug kettle is fitted with a descaling filter. Please pull up the part which is indicated red arrow, the filter can be removed from the spout. When installing the filter, please 過熱保護 1 Please read these instructions carefully and retain them for reference. press down this part first and the filter can be locked on the spout. 2 This appliance is not intended for use by persons (including children under 8 years 請記錄下列產品資料 2. Power base 2 8周歲以下兒童、傷健人仕、精神及感官受到影響及缺乏操作常識和經驗者不適宜獨立 為延長本產品的壽命,當水壺沒有水時,請勿煲水。如果您在沒有水或水位低於 1 Do not put the product into water or sprinkle water on it, otherwise, it may cause short old) with reduced physical, sensory or mental capabilities, or lack of experience and 3. Lid 操作此產品。如需操作需有相關人仕從旁指引及對其行為安全負責。 knowledge, unless they have been given supervision or instruction concerning use of the 0.5L的情況下, 意外地打開水壺, 恆溫器在達到一定溫度後, 便會中斷電路。 開關將移至OFF circuit and electric shock. 4. 壼蓋開啟按鈕 4. Lid open button 3 如電水臺出現問題,請聯絡代理商或合資格人仕處理並不要自行對其進行維修以免發生 appliance by a person responsible for their safety. Children should be supervised to "0"位置,指示燈將熄滅。此功能啓動後需待10分鐘或以上(待水壺完全冷卻後)才能正常運 2 Do not touch the body of the kettle when they are hot, otherwise it may cause scald. 5. Handle ensure that they do not play with the appliance. 3 Do not open the lid or pour out boiled water when during the course of boiling, 6. 水位刻度顯示 6. Water level indicator 4 請遵從電水臺上的規格表資料連接電源。 3 Have any repairs carried out solely by a qualified electrician. Never try to repair the otherwise, boiled water will easily sprinkle and steam will jet out which may cause scald. 7. "I"/"0"ON/OFF switch (Blue light during operation) 日常清潔及維護 5 此電水壺只適用於家居室內操作,並不適用於商業用途。 appliance yourself. 4 Use qualified socket independently which shall meet the rated power supply of the 6 不要在濕度高的室間內使用。 4 Use this appliance solely in accordance with these instructions. product, unplug the power plug from the socket, when not in use for a period of time, it 7 不要放置電水壺在靠近窗邊工作的平台上工作,以免受室外天氣影響致短路 等意外發 5 Never use the appliance outdoors. may cause heat or fire if the product shares one socket with other electrical appliances. 6 Never use the appliance in a humid room. 2 用軟質潔布對電水臺進行外部清潔,不要將電水臺/無線底座/電源連接部份置入水或洗 8 使用此電水壺時需放置在穩定,平面,及不受阻礙的平台上操作。 7 Do not place the electric bottles in the work of the platform near the window, prevent 碗碟機進行清潔。完成後需用乾布抹乾才可放回。 BEFORE USE FOR THE FIRST TIME 請於首次使用前先移除所有包裝物料並確保沒有阻礙運作的物料存在。並在初次使用時, OVERHEATING PROTECTION 9 不要放置電源線在工作平台的邊緣以防發生危險。 any accidents and short circuit caused by outdoor weather. 3 如水壼內出現變色情況,可用微量食用梳打水沾濕軟質潔布對其進行清潔。 完成後可 Fill the jug with a vinegar and mixed water cleaning solution to the MAX (1.2L) water 先行煲煮三次並於每次完成後排出已煮的熱水。 10 使用時不要放置任何物件蓋著或阻礙電水壺運作。 8 Place the appliance on a flat, stable surface. Do not turn on the kettle if it is empty. The incorrect use of the kettle may negatively affect its Before first use, remove possible manufacturing process residues by boiling 3 times of 用食水沖洗數次才可再行操作。 11 使用電水壺時需保持雙手乾爽以免發生危險。 9 Never allow the power cord to hang over the edge of the draining board, worktop or lifetime. If you accidentally turn on the kettle without water or less than 0.5L water, the thermostat water Dispose this kettle. 4 After boiling, leave the jug with the vinegar solution to stand for a couple hours. 注意! 初次此電水壺時可用稀釋的食用白醋對其進行清潔。 12 清潔前或發生故障時需要關上電水壺並從電源插座移除插頭 will, after reaching a certain temperature, interrupt the electric circuit. The switch will move to the 清洗沉澱物 5 Empty the jug, fill with clean water to the MAX (1.2L) water level, and bring to the boil. 13 當電水壺墜入水時,立刻移除插頭及不要再使用此電水壺。 10 Do not place any objects covered the kettle. Tip: You can use vinegar or special descaling agents for the first time. OFF "0" position and the indicator light will turn off. Allow the kettle to cool down for at least 10 Empty the jug. Repeat this process twice. 14 不要使用提供以外的無線底座對電水壺進行連接或使用提供的無線底座作其他用途。 11 Make sure that your hands are dry before touching the appliance, power cord or plug. 中心聯絡,不便之處,敬請原諒。 鈣化物或其他物質會因長期使用而附在電水壺內。為確保安全及產品使用需定期進行整理。 12 Always remove the plug from the wall socket after use, and before cleaning the minutes before using it again. 15 使用電水壺加熱食水前,請從無線底座取出電水壺並注入食水,注入食水時不要超過顯 線上的"MAX"1.2公升的指示以防熱水溢出。 your health. Use solely a vinegar solution, or special descaling agents available from 説明書內容以英文版本為準 1.2L Electric Kettle CLEANING AND MAINTENANCE 2 按著電水壺壼蓋開關按鈕(4)打開壼蓋。 16 啓動前需注意電水壺已注入冷水,不要在空載時啓動電水壺。 2 進行清潔可先向上拔出過濾網。請參考以下附圖: 13 Do not pick up the appliance if it falls into water. Remove the plug from the wall socket 3 注入所需加熱的食水容量,最小為0.5公升而最大為1.2公升。注入食水時需注意注入量 17 電水壺在操作時需確保壺蓋已關上以防發生危險。 immediately and do not use the appliance any more. 1. Remove the plug from the wall socket, and allow the appliance to cool. 1.2公升電熱水壺 1 Turn the jug so that the spout faces away from you. 不能低於最小容量及高於最大容量以免對電水壺操作造成損害或熱水溢出。 18 不要在操作時開啓電水壺壺蓋。 14 Use solely the power base supplied with the jug kettle. Never use the power base for 2. Clean the jug with a damp cloth. Never immerse the appliance in water. Never put the SPECIFICATIONS 2 Press the lid open button (4) and swing the lid open. 19 当有熱水在壺身内,请不要觸摸電水壺壺身表面。 appliance in a dishwasher. Make sure that the electrical connections do not become Model No.型號: GSK12TT 3 Fill the jug with the required quantity of water (at least 0.5 litres, and a maximum of 20 此電水壺只可加熱食水,不能加熱其他液體以免對電水壺造成損害。 15 Remove the jug from the power base, and fill with water from the tap. Never fill the jug 注意:不要在有線底座上溢出或灑上任何液體。 1.2 litres). Never fill the water boiler over the "MAX". Otherwise the hot water can spatter Model No.: GSK12TT 21 最小的注水量為0.5 公升,注水時需注意食水已過0.5公升的水線上。 above the 'MAX' 1.2 litre level. 3. If the interior of the jug has become severely discoloured, then the best way to clean it Mains Voltage & Frequency: 220-240V ~ 50/60Hz out of the power base. 22 使用完畢後進行收藏前需確保電水壺已降温至室温。 16 DO NOT switch on "I" the appliance before you have filled it with water. Fill only with is with a damp cloth and a little washing soda. After cleaning, rinse the jug very Power consumption: 1850-2200W 1 蓋上電水壺壺蓋直至聽到聲音。 23 不要使用任何外置式的時間掣或遙控掣對電水壺進行操控。 3 注入稀釋的食用白醋及混和水的清潔液至MAX(1.2L)最大注水位置並進行加熱。 thoroughly. 2.將電水壺放在有線底座上並連接電源,接著按下開關掣至"1"位置而指示燈會自動亮著藍 24 產品使用後,發熱盤和壺身表面會有餘熱。 4 待加熱完成後,待清潔液浸在電水壺內數小時。 17 The jug's lid must remain securely closed whilst the appliance is in use or durning Website 網址:www.gilman-group.com Product Dimension: 208(W) x 200(H) x 153(D) mm (With power base) **ATTENTION** 25 如本產品的電源線有損壞痕跡,為保障安全,請立即停止使用並聯絡供應商或代理商或 5 完成浸洗後,把其液體倒出,再注入食水至MAX(1.2L)最大注水位置並進行加熱,此步 3.當電水臺開動後,加熱程序會啓動並煮熱至沸騰啓度。完成後會自動停止加熱而指示燈會 ATTENTION 18 Never open the lid when the water is still boiling. 合資格人員作更換。 驟需進行2次以便完成整個清潔程序。 Make sure that you do not spill any water on the power base. *The final product specification may be varied according to a different lot of 熄滅,開關掣自動到"0"位置,代表操作完成。 19 Never touch the kettle body when the hot water inside kettle bady. 1 Never use corrosive or scouring cleaning agents or sharp objects (such as knives or

2 Before cleaning, make sure that the appliance is not connected to the power supply and

Lime will be deposited on the heating element at a rate depending on the hardness of the

water. For this reason the heating element must be cleaned at regular intervals.

hard brushes) to clean the appliance.

that it has cooled down.

DESCALING

本產品不斷改進中,如功能有所更改,恕不另行通知,如有疑問,請與客戶服務 ToolBox Customer Service Centre 客戶服務中心: 4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong 香港九龍灣啓祥道20號大昌行集團大廈4樓 Customer Service Hotline 客戶服務熱線:(852) 8210 8210 Service E-mail 電郵地址:8210service@gilman-group.com Please register now at 請即上網登記:www.toolbox.hk ToolBox 太平家庭電器

不可以使用其他清潔液進行清潔程序以防化學物質對使用者健康造成損害。

*相關產品的規格,可能會因配件批次或實際使用地區的電壓差異而有所不同。

產品規格

型號: GSK12TT 電壓: 220-240V ~ 頻率: 50/60Hz

容量: 1.2 litres

功率: 1850-2200W

產品尺寸: 208(W) x 200(H) x 153(D) mm (含有綫底座)

4 等指示燈熄滅後便可從有線底座移除電水壺並倒出熱水。

1 不要將產品放在水中或濺水,否則,可致短路和觸電。

2 使用本產品時,切勿接觸電水壺的表面,否則,可致燙傷。

3 煮沸中切勿打開壺蓋或倒熱水,否則,熱水飛濺和蒸氣噴出可致燙傷。

提示:不要接觸倒出的熱水或加熱中的熱水以免對身體造成損害。

5 完成後可切斷電源連接以保安全。

注意! 此電水壺只適合家庭用途。

material and actual input voltage power of the usage area.