

**gemini**  
ITALY

STYLISH MULTI-TEMPERATURE  
ZONE CORDLESS KETTLE  
( SAKURA PINK LIMITED EDITION)

時尚多功能溫控無線電熱水壺  
( 櫻花粉色限定版 )

Model No.型號: GSK800

Before using your product for first time, please read this instruction manual.  
在使用本產品前,請仔細閱讀本說明書並保存好。

## SAFETY INTRUCTIONS

- 1 Please read these instructions carefully and retain them for reference.
- 2 This appliance is not intended for use by persons (including children under 8 years old) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 3 Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- 4 Use this appliance solely in accordance with these instructions.
- 5 Never use the appliance outdoors.
- 6 Never use the appliance in a humid room.
- 7 Do not place the electric bottles in the work of the platform near the window, prevent any accidents and short circuit caused by outdoor weather.
- 8 Place the appliance on a flat, stable surface.
- 9 Never allow the power cord to hang over the edge of the draining board, worktop or table.
- 10 Do not place any objects covered the kettle.
- 11 Make sure that your hands are dry before touching the appliance, power cord or plug.
- 12 Always remove the plug from the wall socket after use, and before cleaning the appliance.
- 13 Do not pick up the appliance if it falls into water. Remove the plug from the wall socket immediately and do not use the appliance any more.
- 14 Use solely the power base supplied with the kettle kettle. Never use the power base for other purposes.
- 15 Remove the kettle from the power base, and fill with water from the tap. Never fill the kettle above the 'MAX' 0.5litre level.
- 16 DO NOT press ON/OFF button the appliance before you have filled it with water. Fill only with cold water.
- 17 The kettle's lid must remain securely closed whilst the appliance is in use or during operation.
- 18 Never open the lid when the water is still boiling.
- 19 Never touch the kettle body when the hot water inside kettle body. Only can touch the plastic handle and base control panel.
- 20 Use the appliance only to boil or heat water. Never use it for other liquids!
- 21 The kettle is used NTC temperature detection. The difference of plus or minus 5 C between the displayed and actual water temperature is a normal phenomenon.
- 22 When the boiled water is poured into the cup to measure temperature (due to the influence of the hot water passing through the air and the different temperature of the cup),the water temperature will be greatly deviated.
- 23 Allow the appliance to cool to room temperature before storage.
- 24 This appliance may not be used through an external timer or by means of a remote control.
- 25 The heating element and kettle body surface are subject to residual heat after use.

 
26 The kettle should be avoid collision during use. It is normal some color blocks to fall off due to human factors such as touching or friction with other objects.

27 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## This unit is for HOUSEHOLD USE ONLY

### PRODUCT REVIEW


1. Spout
2. Power base
3. Touch control panel
4. Lid w/handle
5. Handle
6. Steam hole

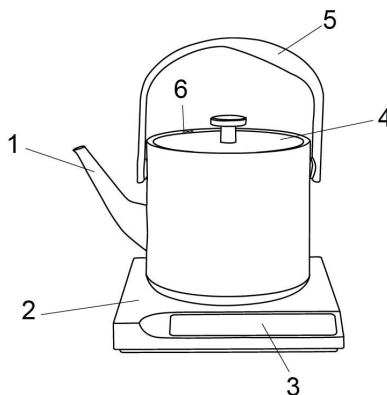

### TOUCH CONTROL PANEL INSTRUCTION

 ON/OFF Button

 Keep Warm Button

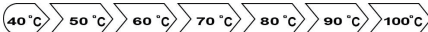 Temperature Setting Button

### BEFORE USE FOR THE FIRST TIME

Before first use, remove all packaging materials and possible manufacturing process residues by boiling 3 times of water cleaning this kettle.

**Tip:** You can use vinegar for the first time cleaning before use.


### USE




- 1 Turn the kettle so that the spout faces away from you.


2. Pull up the lid by holding the handle, fill the kettle with the required quantity of water (a maximum of 0.5 liters). Never fill the water in boiler over the "MAX" line. Otherwise the hot water can spatter out of the power base.


## ATTENTION





Make sure that you do not spill any water on the power base.

3. Close the lid and make sure that it snaps in correctly .  
4. Put the kettle on the base correctly. The buzzer will buzz, all the LED lights up in white for one second. And the on/off button  is flashing slowly. Then enter it standby mode.

**5. Boiling water to 100°C:** Press on/off button  to start, the indicator of temperature setting button in white. Press on/off button  again, the buzzer will buzz and the 100°C indicator is flashing, on/off button  indicator will turn to long bright , then start to heating. When the water boiling to 100°C, the buzzer will buzz 3 times and the power will be cut off and return to standby mode.

**6. Keep warm function:** Press on/off button  to start, the indicator of temperature setting button in white. Press temperature setting button

 to select desired temperature (40°C to 100°C),

indicator of target temperature start to flashing and press on/off button , the keep warm button  and on/off button  indicator will turn to long bright. After that water is start to boiling, once the water temperature reaches the target temperature, the buzzer will buzz 3 times, and the kettle will stop heating, then start to keep warm program. Without any operation, the keep warm function time is 2 hours. During the keep warm program, when the water temperature drops to 3°C, it will self-heating to the keep warm temperature. Press keep warm button  can cancel the keep warm program. In any case, the keep warm function would be turned on or off

7. Separate and protect the body from the power base, During the heating or keep warm

program, if the body is removed and the kettle is temporarily heated, put the kettle body back to the power base within 3 minutes, and the previous working state will continue. After 3 minutes, it will return to standby mode.

8. Remove the kettle from the power base by the handle, and pour the water out.

9. Remove the plug from the wall socket when you have finished using the kettle.

## **ATTENTION**

Be careful you do not touch the hot water or the housing by bare hands. It can cause serious burning wounds.

## **CAUTION**

1 Do not put the product into water or sprinkle water on it, otherwise, it may cause short circuit and electric shock.


2 Do not touch the body of the kettle when it is still hot, otherwise it may cause scald.

3 Do not open the lid or pour out boiled water when during the course of boiling, otherwise, boiled water will easily sprinkle and steam will jet out which may cause scald.

4 Use qualified wall socket independently which shall meet the rated power supply of the product, unplug the power plug from the wall socket, when not in use for a period of time, it may cause heat or fire if the product shares one socket with other electrical appliances.

## **OVERHEAT AND BOIL DRY PROTECTION**

Do not turn on the kettle if it is empty. The incorrect use of the kettle may negatively affect its lifetime. If you accidentally turn on the kettle without water or low water level, when the thermostat reaching a certain temperature, interrupt the electric circuit. The ON/OFF

button  indicator is flashing slowly. Allow the kettle to cool down for at least 10 minutes before using it again.

## **CLEANING AND MAINTENANCE**

1. Remove the plug from the wall socket, and allow the appliance to cool down completely.
2. Clean the kettle with a damp cloth. Never immerse the appliance in water. Never put the appliance in a dishwasher. Make sure that the electrical connections do not become damp.
3. If the interior of the kettle has become severely discolour, then the best way to clean it is with a damp cloth and some washing soda. After cleaning, rinse the kettle very thoroughly.

## **ATTENTION**

1. Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
2. Before cleaning, make sure that the appliance is not connected to the power supply and the kettle has cooled down completely.

## **DESCALING**

Lime will be deposited on the heating plate at a rate depending on the hardness of the water. For this reason the heating plate must be cleaned at regular intervals.

- 1 Remove the plug from the wall socket, and allow the appliance to cool down completely.
- 2 Fill the kettle with a vinegar and mixed water cleaning solution to the MAX (0.5L) water level and boil it.
- 3 After boiled, leave the kettle with the vinegar solution to stand for a couple hours.
- 4 Empty the kettle, fill with clean water to the MAX(0.5L) water level, and bring to the boil. Empty the kettle. Repeat this process twice for cleaning.

Never use ammonia or other corrosive liquids solution products to descale the appliance. These can be injurious to your health.

## **SPECIFICATIONS**

**Model No.:** GSK800

**Mains Voltage & Frequency:** 220-240V ~ 50/60Hz

**Power :** 800-1000W

**Capacity:** 0.5 liters Max.

**Product Dimension:** 210(W) x 235(H) x185(D) mm (With power base)

**\*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.**

閱讀下列說明事項並請妥善保管，以供日後參考。

## 安全指引

 
- 1 請於操作前詳閱操作指引
- 2 8周歲以下兒童、傷健人士、精神及感官受到影響及缺乏操作常識和經驗者不適宜獨立操作此產品。如需操作需有相關人士從旁指引及對其行為安全負責。
- 3 如電水壺出現問題，請聯絡代理商或合資格人士處理並不要自行對其進行維修以免發生危險。
- 4 請遵從電水壺上的規格表資料連接電源。
- 5 此電水壺只適用於家居室內操作，並不適用於商業用途。
- 6 不要在濕度高的空間內使用。
- 7 不要放置電水壺在靠近窗邊工作的平台上工作，以免受室外天氣影響致短路等意外發生。
- 8 使用此電水壺時需放置在穩定、平面、及不受阻礙的平台上操作。
- 9 不要放置電源線在工作平台的邊緣以防發生危險。
- 10 使用時不要放置任何物件蓋著或阻礙電水壺運作。
- 11 使用電水壺時需保持雙手乾爽以免發生危險。
- 12 清潔前或發生故障時需要關上電水壺並從電源插座移除插頭。
- 13 當電水壺墜入水時，立刻移除插頭及不要再使用此電水壺。
- 14 不要使用提供以外的無線底座對電水壺進行連接或使用提供的無線底座作其他用途。
- 15 使用電水壺加熱食水前，請從無線底座取出電水壺並注入食水，注入食水時不要超過顯示線上的“MAX”0.5公升的指示以防熱水溢出。
- 16 啟動前需注意電水壺已注入冷水，不要在空載時啟動電水壺。
- 17 電水壺在操作時需確保壺蓋已關上以防發生危險。
- 18 不要在操作時開啓電水壺壺蓋。
- 19 當有熱水在壺身內，請不要觸摸電水壺壺身表面，僅可以接觸塑料手柄和底座控制面板部分。
- 20 此電水壺只可加熱食水，不能加熱其他液體以免對電水壺造成損害。
- 21 電水壺採用智能NTC感溫檢測溫度，水壺顯示的溫度和實際水溫相差正負5°C屬於正常現象。
- 22 煲好的水倒進杯中測量溫度時（因為熱水經過空氣及杯子不同溫度之影響）水溫會有較大偏差。
- 23 使用完畢後進行收藏前需確保電水壺已降溫至室溫。
- 24 不要使用任何外置式的時間掣或遙控掣對電水壺進行操控。
- 25 產品使用後，發熱盤和壺身表面會有餘熱。
- 26 如本產品的電源線有損壞痕跡，為保障安全，請立即停止使用並聯絡供應商或代理商或合資格人員作更換。
- 27 產品在使用過程中避免碰撞，若與其他物件觸碰或摩擦等人為因素造成部分色塊脫落屬於正常情況。

**注意! 此電水壺只適合家庭用途。**



## 部件示意圖

1. 壺嘴
2. 有線底座
3. 輕觸式控制面板
4. 壺蓋及把手
5. 手柄
6. 蒸汽孔

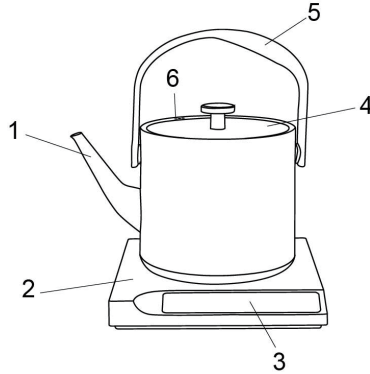


## 輕觸式控制面板按鍵說明



開關鍵



 保溫鍵



溫度選擇鍵

## 首次使用前

請於首次使用前先移除所有包裝物料並確保沒有阻礙運作的物料存在。並在初次使用時，先行煲煮三次並於每次完成後排出已煮的熱水。






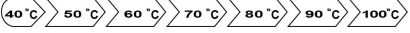
 
 


**注意！** 初次此電水壺時可用稀釋的食用白醋對其進行清潔。

## 操作使用

**注意:** 不要在有線底座上溢出或灑上任何液體。

- 1 使用此電水壺時不要將其出水口壺嘴對著使用者。
- 2 提起壺蓋，注入所需加熱的食水容量，最大為0.5公升。注入食水時需注意注入量不能高於最大容量MAX. 以免對電水壺操作造成損害或熱水溢出。

**注意：** 不要在有線底座上溢出或灑上任何液體及水。


- 3 蓋上壺蓋，確保它能正確地扣上。
- 4 將水壺正確地放在底座上，蜂鳴器會發出一聲響聲，顯示屏上的所有按鍵的燈光會亮一秒後，開關鍵  的燈光緩慢閃爍，進入待機狀態。
- 5 煲水到100°C操作：按下開關鍵  機器進入開始狀態，溫度選擇鍵燈全亮，再按一次開關鍵 ，溫度選擇鍵100°C會一直閃爍，開關鍵  燈變為常亮，水壺開始加熱。一旦水溫到達100°C時，會發出3聲提示音，自動切斷電源，回到待機狀態。
- 6 保溫功能操作：按下開關鍵  機器進入開始狀態，溫度選擇鍵燈全亮，溫度選擇鍵  在40°C-100°C選擇所需的目標溫度，目標溫度燈一直閃爍，按下開關鍵  水壺開始加熱，保溫鍵  和開關鍵  燈變為常亮。一旦水溫達到目標溫度時，會發出3聲提示音，水壺停止加熱並進入保溫狀態。在沒有任何操作情況下，默認保溫時長為2小時。在保溫時間內，當水溫下降3°C後會自動啟動加熱至設定的保溫溫度。按下保溫鍵  即可取消保溫計劃。任何情況下，保溫功能都可以啟動或者關閉。
- 7 壺身與電源底座分離保護功能，在加熱過程中或保溫時，如壺身移開水壺暫停加熱。3分鐘內將壺身放回電源底座，將繼續之前的工作狀態；超過3分鐘則返回待機狀態。
- 8 等水壺停止加熱後可從有線底座移除電水壺並倒出熱水。
- 9 完成後可切斷電源連接以保安全。

**提示:**不要直接用手接觸倒出的熱水或加熱中的熱水及水壺表面以免對身體造成損害。

## 警告

- 1 不要將產品放在水中或濺水，否則，可致短路和觸電。
- 2 使用本產品時，切勿接觸電水壺的表面，否則可致燙傷。需用手柄提起壺身或按開蓋按鈕打開水壺蓋。
- 3 煲水時，切勿打開壺蓋或倒熱水，否則，熱水飛濺和蒸氣噴出可致燙傷。
- 4 單獨使用符合額定電源的電源插座，不使用時，從電源插座上拔下電源插頭，若與其他電器產品共用，可致發熱，發生火災。

## 過熱及乾燒保護

為延長本產品的壽命，當水壺沒有水時，請勿煲水。如果您在沒有水或水位低的情況下，意外地開啓水壺，恆溫器在達到一定溫度後，便會中斷電路。開關鍵  燈緩慢閃爍。此功能啓動後需待10分鐘或以上(待水壺完全冷卻後)水壺才能正常運作。

## 日常清潔及維護

- 1 切斷電源並移除插頭。
- 2 用軟質潔布對電水壺進行外部清潔，不要將電水壺/底座/電源連接部份置入水或洗碗碟機進行清潔。完成後需用乾布抹乾才可放回。
- 3 如水壺內出現變色情況，可用少量食用梳打沾濕軟質潔布對其進行清潔，完成後可用清水沖洗數次才可再進行操作。

## 清洗沉澱物

鈣化物或其他物質會因長期使用而附在電水壺內。為確保安全及產品使用需定期進行整理。

- 1 清潔前請中斷電源並確保電水壺已冷卻至室溫。
- 2 注入稀釋的食用白醋及混和水的清潔液至MAX(0.5L)最大注水位置並進行加熱。
- 3 待加熱完成後，待清潔液浸在電水壺內數小時。
- 4 完成浸洗後，把其液體倒出，再注入食水至MAX(0.5L)最大注水位置並進行加熱，此步驟需進行2次以便完成整個清潔程序。

**不可以使用氨水或其他腐蝕性液體進行清潔程序，以防化學物質對使用者健康造成損害。**

## 產品規格

**型號:** GSK800

**電壓:** 220-240V ~

**頻率:** 50/60Hz

**功率:** 800-1000W

**容量:** 0.5litres (最大)

**產品尺寸:** 210(闊) x 235(高) x 185(深) 毫米 (含電源底座)

\*相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

請記錄下列產品資料

● 型號

---

● 機身編號

---

● 經銷商名稱

---

● 購買日期

---

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

**ToolBox Customer Service Centre 客戶服務中心：**  
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong  
香港九龍灣啓祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210  
Service E-mail 電郵地址：8210service@gilman-group.com  
Please register now at 請即上網登記：www.toolbox.hk  
Website 網址：www.gilman-group.com



Proudly Serviced by:



**太平家庭電器**

