



gemini
ITALY

**3-PIECE FOOD VACUUM
CANISTER SET**

保鮮真空瓶三件套裝


MODEL NO 型號: GVSA3



A GILMAN GROUP BRAND

This canister set is compatible with Gemini Vacuum Sealers. Vacuum results may not be guaranteed if this canister is used with other vacuum sealing machines. For the best vacuum preservation results of food items, it is recommended to re-vacuum the canister in every two months for long time preservation.

PRESERVING FOOD IN CANISTERS

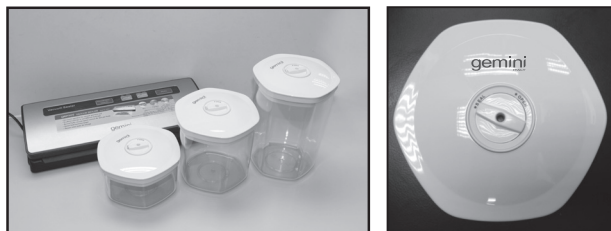

1. Before use, ensure canisters, lid and vacuum tube are completely clean and dry.

Note: Do not immerse canister lids in water, wipe with a damp cloth only. Do not wash and dry canister lid and vacuum tube in dishwasher.

2. Fill canister with the item to be preserved and secure lid onto the canister.

Note: Leave at least one inch of space between the lid and food item, then make sure the lid is already locked before vacuuming.

3. Turn canister lid dial arrow to SEAL position.

4. Connect one end of the vacuum tube (Port A) to the vacuum canister lid and the other end of the vacuum tube (Port B) to the Gemini Vacuum Sealer. Ensure both connections are pushed in tightly. (See below diagrams)

Note: If vacuum tube is not pushed in fully into the vacuum tube port or the vacuum canister lid hole, air will not be drawn from the canister.



5. Press the "Canister Vacuum" button on the vacuum sealer to draw out air from Canister through tube. Vacuum action will stop automatically when all air has been drawn out from canister. If canister is unable to be vacuumed and sealed for some unknown reason, the vacuum operation will shut down automatically after 2 minutes.

6. Remove Vacuum tube connection from the canister.

7. Repeat Steps 2-6 for other canisters to be sealed.

Note: Canisters are not to be used in microwaves.

8. To open canister after vacuum packaging, turn the canister lid dial arrow to OPEN position. Wait several seconds for the lid to be released.

真空瓶配套用於Gemini真空保鮮機。如果將真空瓶於其他真空保鮮機上使用，可能未能達致理想抽真空效果。

如保存時間較長，為達致理想真空效果，建議每兩個月重新進行抽真空程序。

保存食物於保鮮真空瓶



1. 使用前，請確保保鮮真空瓶、瓶蓋及真空軟管完全清潔及乾爽。

注意：請勿將保鮮真空瓶蓋浸入水中，使用後只需用濕布輕輕擦拭便可。請勿將瓶蓋及軟管放入洗碗碟機清洗及烘乾。



2. 將食物放入保鮮真空瓶保存時，請確保保鮮真空瓶蓋置於保鮮真空瓶上。

注意：請預留最少 1 吋空間於瓶蓋及食物之間，然後在抽真空前請確保瓶蓋已經完全蓋上。

3. 將瓶蓋上旋鈕轉到真空 (SEAL) 位置。

4. 將真空軟管的尾端(A)連接瓶蓋並將另一尾端(B)連接Gemini真空保鮮機上的抽真空口。確保兩端連接穩妥。

注意：如果真空軟管的尾端未完全連接瓶蓋或真空保鮮機的連接口，空氣將不能於瓶內抽出。

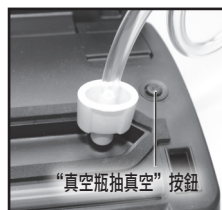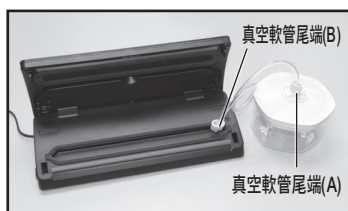

5. 按下Gemini真空保鮮機上的“真空瓶抽真空”按鈕以開始抽真空程序。當完成抽真空時，真空保鮮機將自動停止。如果保鮮真空瓶因某些原因未能成功密封，真空程序將於兩分鐘後自動停止。

6. 移除於瓶蓋上的真空軟管。

7. 重覆以上 2 - 6 步驟將其他保鮮真空瓶密封。

注意：保鮮真空瓶不能用於微波爐。

8. 旋轉保鮮真空瓶蓋上的旋鈕至 OPEN 位置，能打開已經密封的保鮮真空瓶，等待數秒鐘瓶蓋將能打開。

請記錄下列產品資料

- 型號

- 機身編號

- 經銷商名稱

- 購買日期

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

ToolBox Customer Service Centre 客戶服務中心：

7/F., Goodwill Industrial Building, 36-44 Pak Tin Par Street, Tsuen Wan, N.T.
新界荃灣白田壩街36-44號信義工業大廈7樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210

Service E-mail 電郵地址：8210service@gilman-group.com

Please register now at 請即上網登記：www.toolbox.hk

Website 網址：www.gilman-group.com



Proudly Serviced by:



太平家庭電器

2/F, Shing Dao Industrial Building, 232 Aberdeen Main Road, Hong Kong
香港香港仔大道232號城都工業大廈2樓