



Tumble Dryer

USER MANUAL

MODEL: PD3EV

Please read this operation manual thoroughly before using this unit.



CAUTION: RISK OF FIRE !

CONTENTS

SAFETY INSTRUCTIONS

■ Safety Instructions.....	2
----------------------------	---

INSTALLATION

■ Product Description.....	6
----------------------------	---

■ Installation.....	7
---------------------	---

OPERATION

■ Quick Start.....	8
--------------------	---

■ Before Each Drying.....	9
---------------------------	---

■ Control Panel.....	10
----------------------	----

■ Drying Programmes Table.....	11
--------------------------------	----

MAINTENANCE

■ Cleaning And Care.....	12
--------------------------	----

■ Trouble Shooting.....	13
-------------------------	----

■ Technical Specifications.....	14
---------------------------------	----

SAFETY INSTRUCTIONS

■ Safety Instructions

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or qualified persons in order to avoid hazard.
- This appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance, cleaning and user maintenance shall not be made by children without supervision.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- The lint trap needed to be cleaned frequently.
- Lint must not be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substance such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex form), shower caps, waterproof textiles, and rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, use specified the fabric softener as specified within instructions
- The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side. In such a way, opening of the tumble dryer door is restricted.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation generate heat and cause fire if the heat cannd be escaped. Piling, stacking or storing oil-affected items can made fire hazard due to heat fail to escape.
- The appliance should not be overturned during normal use or maintenance.
- Remove all objects from pockets such as lighters and matches.
- For appliances with ventilation openings in the base, a carpet must not obstruct the openings.

- Children of less than 3 years should be kept away unless continuously supervised.
- Plug must be accessible after installation.
- Remove all packages before using the appliance. Otherwise, serious damage and dangerous might be happened.



 
Warning!

- Never stop a tumble dryer before the end of the drying cycle otherwise it will cause harm and drying due to heat still exist.
- The appliance must not be connected with an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

■ Power supply and grounding

The dryer employs alternative current with the rated voltage and frequency. When the voltage fluctuates between 6% of rated voltage, the dryer can work normally

A special power socket with a capacity 10A for the dryer had better be set beside the dryer for convenience and safety. The method of connection of the socket is as the figure below.

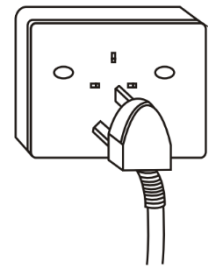

To be safe, please make improvements as soon as possible according to the rules and suggestions mentioned above.



Warning!

 
The socket and the grounding wire must be installed by an electrician to prevent incorrect installation or use of the socket and to guarantee the safety of use of electricity. No connection of the grounding wire and the neutral wire, otherwise the cabinet will be charged, which is likely to cause the danger of electric shock.

■ Precautions


Install or store where it will not be exposed to temperatures below freezing or exposed to water or weather, which could cause permanent damage and invalidate the warranty.




Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust and dirt. An obstructed port might reduce the airflow and made hazard.

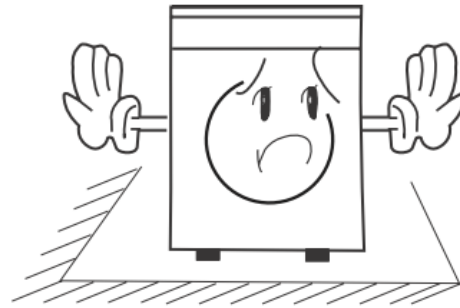

 Spin the laundry thoroughly in washing machine. High spin speed can reduce the drying time and save energy consumption.

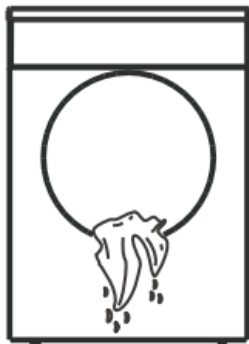

 Make sure combustible sprayer will not be close to dryer when it is working, and once the gas leaks, do not touch plug or start/pause on it.

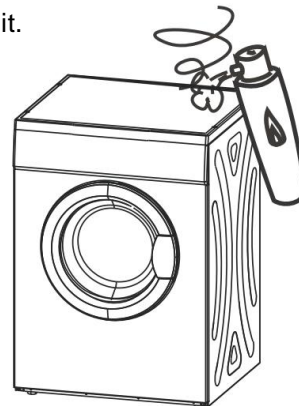


Do not wash or dry articles that have been cleaned in, washed in, soaked in or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.).




Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.



 Do not allow children on or in the appliance .Close supervision of children is necessary when the appliance is used near children.

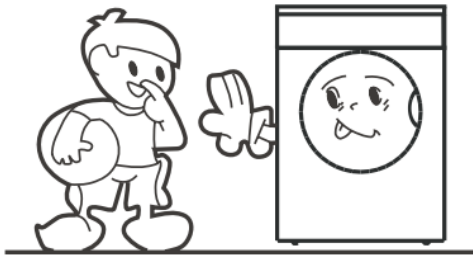

 
Please do not use the machine when your foot or hand with water.

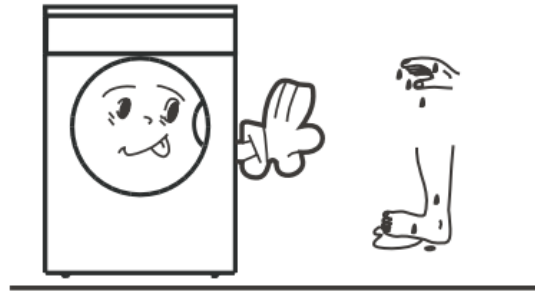

Do not store plastic, paper or clothing that may burn or melt on top of the dryer during operation.



 
The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels .

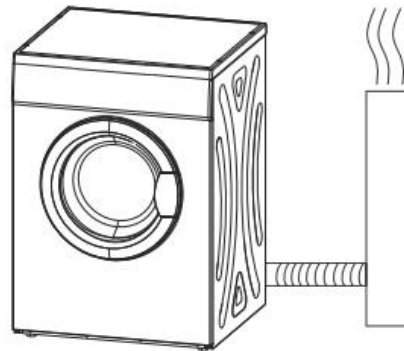

Do not dry articles containing rubber , plastic or similar materials such as padded bras, tennis shoes, galoshes, bath mats , rugs, bibs, baby pants, raincoat plastic bags or pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion.




 The door can be opened only after the programme of the drying machine is completed. Do not open the door before the programme finished to avoid the human skin from being scalded by hot steam or over heated drying machine.

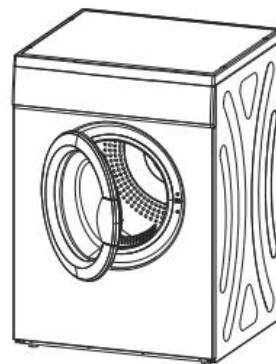



INSTALLATION

 ■ Product Description

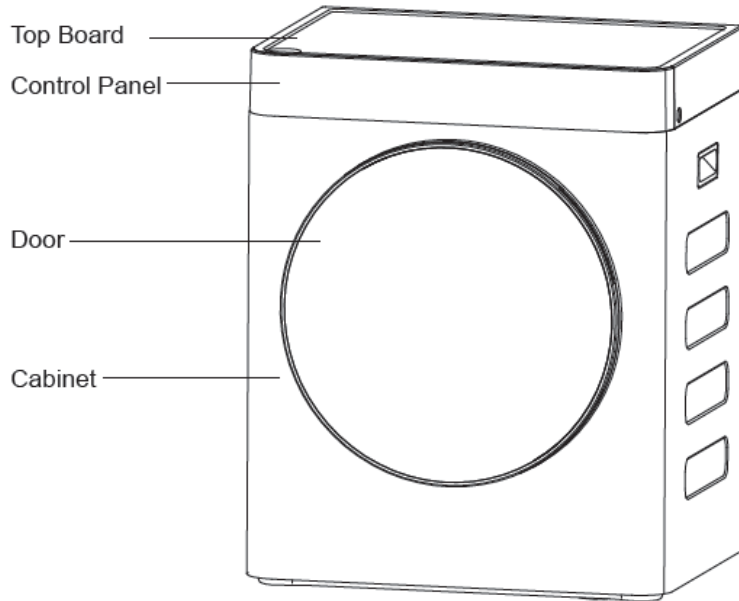

Note: Please see the products you purchased in kind prevail.

 
Accessories

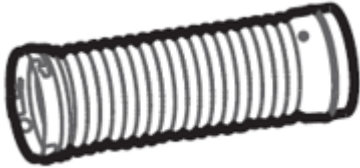	
Air outlet pipe	Elbow
1 Piece	1 Piece

■ Installation


Dryer should be placed in a ventilated area with not less than 10cm distance from the wall.

 It is suggested there are no obstacles within 1.5m in front of dryer and keep ventilated.

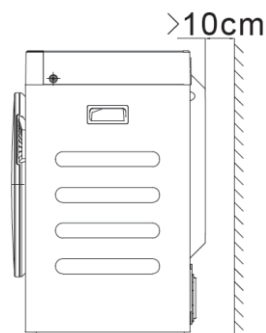

Once in its permanent operating position, check that the dryer is absolutely level with the horizontal position.

 If it is not, adjust the feet with a tool.

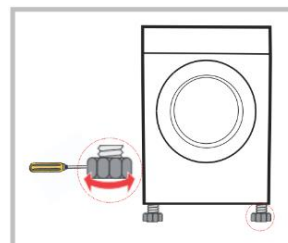

NOTE!

If dryer could not be placed horizontally (the lean angle is no more than 2°, the dryer will work unbalanced or stop working sometimes.

Notice when installing:

- Do not install the dryer in the open air or place easily damaged by rain;
- Do not place the back of dryer near curtain or something in the wind;
- Do not place the dryer near gas or flammable area.

Flex tube fixing:

1. Align the accessory elbow horizontally to the left or right, align the end with the slot on the exhaust port on the back of the dryer, and push the latch into the slot firmly (Figure 1).
2. Push the end of the accessory outlet pipe with the slot into the bent pipe buckle, and turn it clockwise into the slot (Figure 2).
3. Extend the other side straight from the window or wall hole to the outside. The telescopic tube cannot be discounted or extended to the sewer (Figure 3, Figure 4).

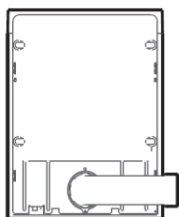 


Figure 1

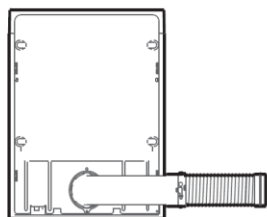 


Figure 2

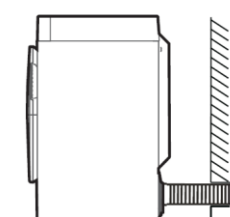 


Figure 3

 



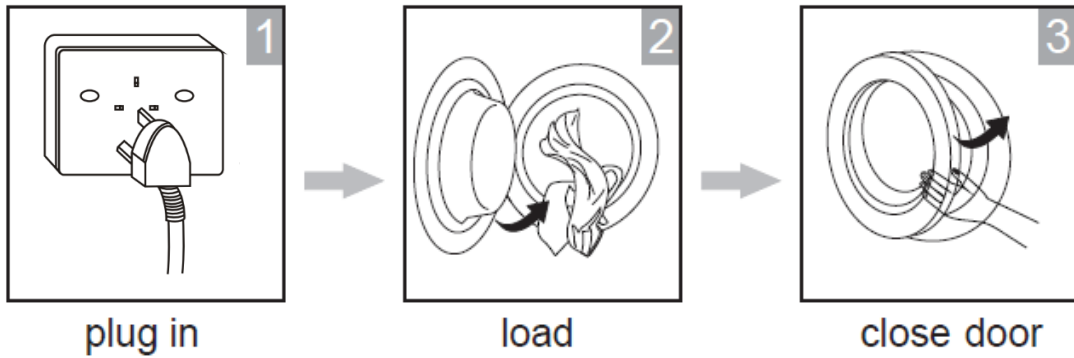 
Figure 4

OPERATIONS

 
■ Quick Start

 Note!

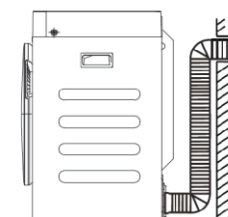Before using, please make sure it's installed properly.




Drying

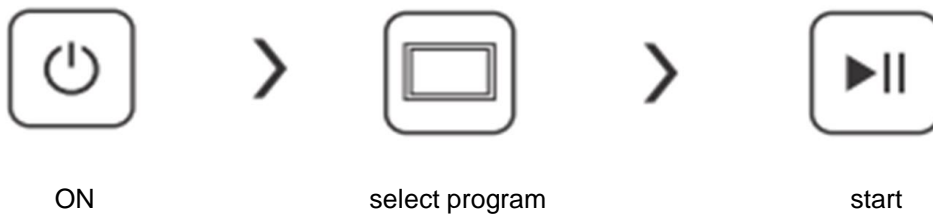

After Drying



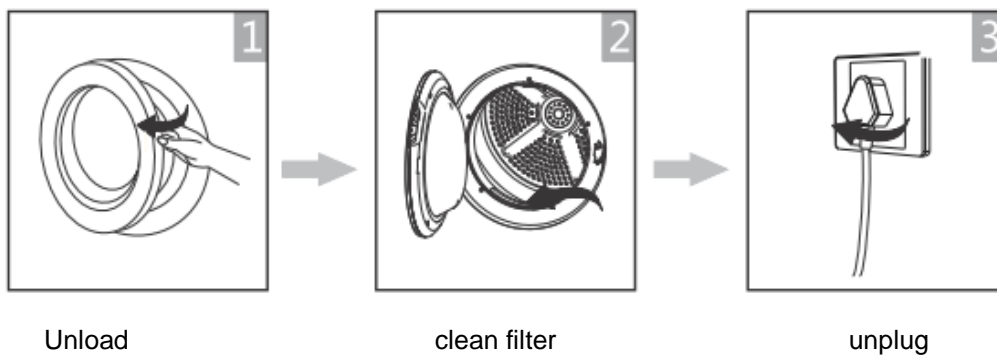 








Buzzer beep or "0:00" on display



■ Before Each Drying

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
2. For uniform drying result, sort the laundry according to the fabric type and drying programme.
3. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
4. Do not over dry the clothes, because over dried clothes can easily get creases.
5. Do not dry the articles containing rubber or similar elastic materials.
6. The door can be opened only after the programme, it can prevent injury from being scalded by hot steam or over heated drying machine.
7. Clean the lint filter and empty container after each use to avoid extension of drying time and energy consumption.
8. Do not put clothes after dry cleaning into the dryer.













The reference weight of dry clothes (each):

 Mixed-fabric clothes (about 800g)	 Jacket (about 800g cotton)	 Jeans (about 800g)	 Towel quilt (about 900g cotton)
 Single bedsheet (about 600g cotton)	 Work clothes (about 1120g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed-weave)	

Note!

 
- Never over load.
- Not for textile with dropping water. The dryer could be damaged, even fire.
- Not suitable for silk or woolen textiles









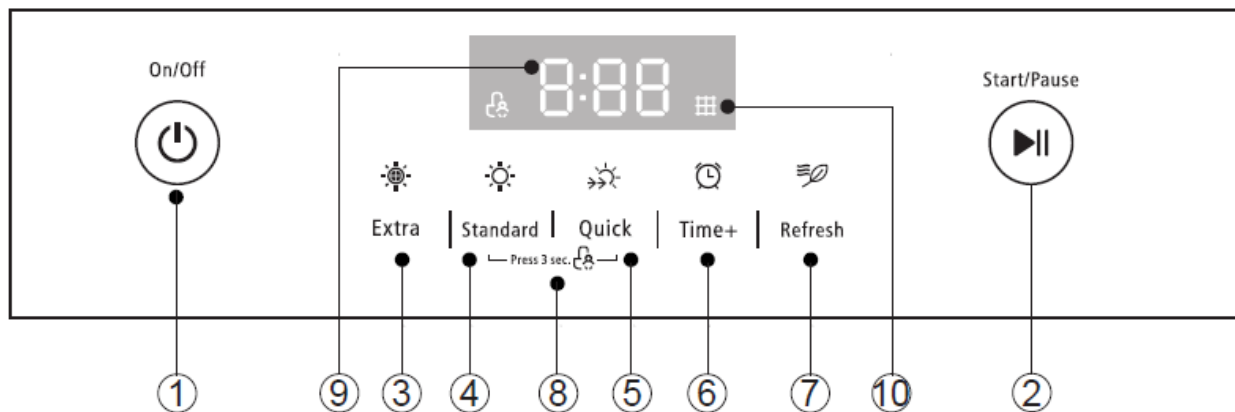

Please pay attention to use the drying machine if the materials of your clothes can not be dried by it or contain the symbols as follows:

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

OPERATIONS

Control PANEL



- | | |
|--|--|
| <p>①  On/Off
After power connected in and loading, switch the product on or off.</p> | <p>②  Start/Pause
Press the button to start or pause the drying cycle.</p> |
| <p>③  Extra
To dry cotton pieces of clothing.
Drying level: extra dry.</p> | <p>④  Standard
Automatic drying for cotton and linen loading with full power.</p> |
| <p>⑤  Quick
Fast drying for the polyester, mixed-fabric loading within 0.8kg.</p> | <p>⑥  Time+
Press the button continuously to adjusted the time of drying from 10-120 minutes .</p> |
| <p>⑦  Refresh
Refresh the laundry within 1kg.</p> | |
| <p>⑧  Child Lock
This function can effectively prevent children from mis-pressing or mis-operating the dryer.
To set this function: Press “Standard” and “Quick” simultaneously for 3sec., then Child Lock lights on.</p> | |
| <p>⑨  Remaining Time</p> | <p>⑩  Reminder for filter cleaning.
After the program finishes, this light is on to remind the user of cleaning the filter.</p> |

Note!

- Clean the filter cabinet and inner tube.
- Clean the filter when the “Filter” light is flashing, after the dryer stop.

■ Drying Programmes Table

Control Panel Programs	Weight (max) (kg)	Display Time	Time Adjustment (min)
Standard	3.0	1:46	/
Extra	3.0	1:58	/
Quick	0.8	0:45	/
Time+	1.0	0:10	10-120
Refresh	1.0	0:10	10-60



Note!

 
- Different series of products may have different combination keys for child lock.
- This function is set after the machine starts to operate. Once it's activated, no pressing (except power On/Off key) to the dryer can work. If you want to operate the dryer, please disable the Child Lock first.

MAINTENANCES

■ Cleaning And Care


Filter clean

- Clean the lint filter after each use.
Remove by pulling straight up.
- Cleaning filter.
Use wiping cloth or your fingers.
- Install filter.
If the filter is cleaned by damp cloth or water, please install after the sun dry.

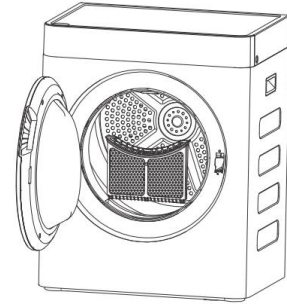

Cleaning cabinet and inner tube

 - Use soft damp cloth wipe when cleaning cabinet and inner tube
- Not to rinse by water directly.
- Not to use neutral scour wipe.
- Not to use gasoline and alcohol wipe.
- Make sure open the front door for aeration after cleaning the inner tube.

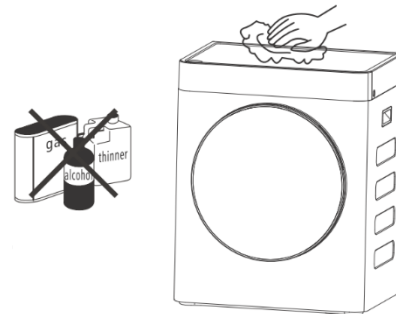

■ Trouble Shooting

Trouble	Cause	Solution
Will not start	<ul style="list-style-type: none"> ● Power cut. ● The power plug is not fully plugged. ● The clothes in machine are over loaded. ● The temperature fuse is cut. 	<ul style="list-style-type: none"> ● Wait for switching on electricity. ● Check the power socket, make sure fully plugged. ● The clothes in dryer must be after spinning, and drying clothes cannot exceed 3kg. ● Please arrange technician restore the temperature fuse.
External hot or can smell hot	<ul style="list-style-type: none"> ● The lint filter is dirty. ● The uptake or exhaust duct is dirty. 	<ul style="list-style-type: none"> ● Make sure clean the lint filter in time. ● Clean out the stem.
Clothes too dry	<ul style="list-style-type: none"> ● The clothes in machine are over loaded. ● Not to take out the clothes in time when finish. ● The clothes don't assort properly. ● The temperature is too high. 	<ul style="list-style-type: none"> ● Make sure the clothes are not too full. ● Take out the clothes immediately when finish. ● Observe the Laundry Labels.
Clothes shrink	<ul style="list-style-type: none"> ● Clothes excessive drying after laundry. 	<ul style="list-style-type: none"> ● Observe the Laundry Labels. ● If easy to shrink, please check in advance. ● Take out the clothes when tiny damp before too dry. ● Then hang the clothes until full dry.
Hairball on clothes	<ul style="list-style-type: none"> ● It is right for synthetic fiber and permanent press fiber causing hairballs. This is because the right rub causing. 	<ul style="list-style-type: none"> ● Use fabric softener lubricate fiber, please spray settled gule on cuff and neckline when iron clothes. Turn the sarcenet out for reducing rub.

- The sound of dryer may caused by Heavy / wet clothes' turning and bumping, and this will cause noise accordingly.
- Air bumping: When drying, machine will generate steam which will come out from pipe and this will cost bumping with the bottom of inner tube.

Error code	Description	Criteria	Action after fault denounced
E33	Temperature Sensor error	Temperature Sensor is open or short	Stop the program and go to fault state

■ Technical Specifications

Model	PD3EV
Dimension (D*W*H)	520*435*640
Rated power	1250W
Rated voltage	220-240V~
Rated frequency	50Hz
Weight of product	20kg
Rated capacity	3.0kg
Ambient temperature	5°C ~35°C

Please record the following product information

- Model _____
- Serial No. _____
- Name of the franchiser _____
- Date of purchase _____

The continuous improvement of products, such as function is changed, without prior notice, if there are any questions, please contact customer service, Sorry for the inconvenience, and please forgiveness.

ToolBox Customer Service Centre:

Service E-mail: 8210service@gilman-group.com

Please register now at: www.toolbox.hk

Website: www.gilman-group.com



Proudly Serviced by:



PHILCO®

乾衣機

使用說明書

型號：PD3EV

操作本機之前，請仔細閱讀本說明書。



注意：火災危險！

目錄

安全守則

- 安全守則..... 2

安裝

- 產品介紹..... 6
- 安裝步驟..... 7

操作

- 快速操作..... 9
- 每次乾衣之前..... 9
- 控制面板..... 10
- 乾衣程序表..... 11

維修保養

- 清潔和保養..... 12
- 疑難排解..... 13
- 技術規格..... 14

安全守則

- 本設備不適用於肢體，感官或精神能力較弱或缺乏經驗和知識的人（包括兒童）使用，除非由負責其安全的人員對他們使用本設備進行監督或指導。
- 應該督導兒童以確保他們不要玩耍本產品。
- 如果電源線損壞，則必須由製造商，其服務代理商或合格的技術人員更換，以免造成危險。
- 如果已接受有關安全使用本設備的監督或指導，並能理解其危害，則本設備可由 8 歲及以上的兒童以及肢體，感覺或精神能力較弱或缺乏經驗和知識的人員使用。
- 請勿讓兒童玩耍本產品，不得在沒有監督的情況下由兒童進行清潔和用戶維護。
- 如果衣物已經使用工業化學品進行清潔，則不要使用此乾衣機。
- 必須經常清洗集棉器。
- 切勿使棉絨堆積在滾筒式乾衣機周圍。
- 請勿在滾筒式乾衣機中烘乾未洗滌的物品。
- 沾有食用油，丙酮，酒精，汽油，煤油，去污劑，松節油，蠟和除蠟劑等物質的物品應在熱水中用適量的洗滌劑洗滌，然後在滾筒式乾衣機中乾燥。
- 泡沫橡膠（乳膠形式），浴帽，防水紡織品，橡膠背襯物品以及配有泡沫橡膠墊的衣服或枕頭等物品不應在滾筒式乾衣機中乾燥。
- 應按照織物柔軟劑說明中的說明使用織物柔軟劑或類似產品。
- 切勿將廢氣排入用於排出設備燃燒氣體或其他燃料煙霧的煙道。
- 設備不得安裝在可鎖門、滑動門或鉸鏈位於乾衣機另一側的門後面以免限制乾衣機門完全打開。
- 受油影響的物品會自燃，尤其是在暴露於熱源（例如滾筒式乾衣機）時。
- 沾有油的物品會變熱，並會引起氧化反應。氧化會產生熱量。而熱量無法散失時，則物品可能會變得很熱而著火。堆放，堆疊或存儲受油影響的物品可防止熱量逸出，從而引起火災。
- 在正常使用或維護期間，請勿將本產品翻轉。
- 從口袋裡取出所有物品，例如打火機和火柴。
- 對於在底座上有通風孔的設備，地毯一定不能阻塞通風孔。
- 3 歲以下的兒童應遠離本設備，除非有人持續監督。
- 安裝後必須可插拔插頭。
- 使用設備之前，請先取出所有包裝。否則可能會導致嚴重損壞。



 
警告！

- 在乾燥程序運作結束之前，切勿停止滾筒式乾衣機，否則過多的热量會散發並可能造成傷害和造成使用者受傷。
- 禁止通過外部開關設備（例如計時器）為設備供電，也不能將其連接到由公用事業公司定期打開和關閉的電路上。

供電和接地

乾衣機採用額定電壓和頻率的交流電流，當電壓在額定電壓的 6%之間波動時，乾衣機可以正常工作。

為了方便和安全起見，最好在乾衣機旁設定一個容量為 $\geq 10A$ 的乾衣機專用電源插座，插座的連接方法如下圖所示。

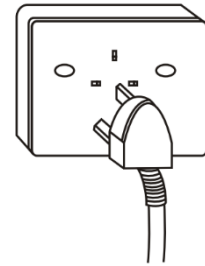

為了安全起見，請根據上述規則和建議儘快進行改進。



警告！

 
- 插座和接地線必須由電工安裝，防止不正確安裝或使用插座，保證用電安全接地線與中性線不得連接，否則會給機體充電，很可能造成觸電危險。

■ 注意事項


將其安裝或存放在不會受到冰點以下溫度或水或天氣影響的地方，否則可能會造成永久性損壞並使保修無效。




排氣口周圍的區域和附近的周圍區域應避免堆積棉絨，灰塵和污垢。阻塞的端口可能會減少氣流。

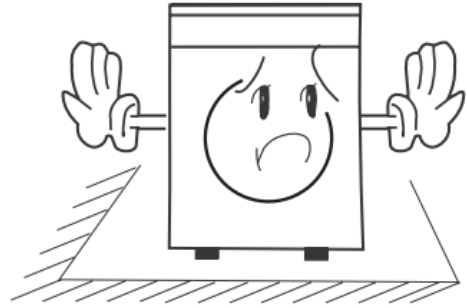


徹底旋轉乾衣機中的衣物。高速旋轉可減少乾燥時間並節省能耗。

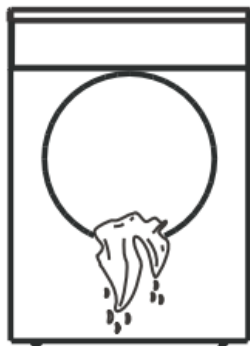 

 
確保可燃噴霧器在工作時不會靠近乾衣機，並且一旦氣體洩漏，請勿觸摸插頭或在其上啟動/暫停。

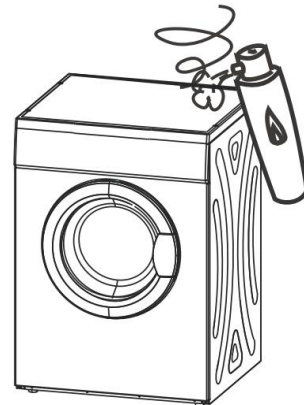

 
請勿乾燥已被易燃或易爆物質（例如蠟，油，油漆，汽油，脫脂劑，乾洗溶劑，煤油等）清洗，浸入，浸入或斑點化的物品。

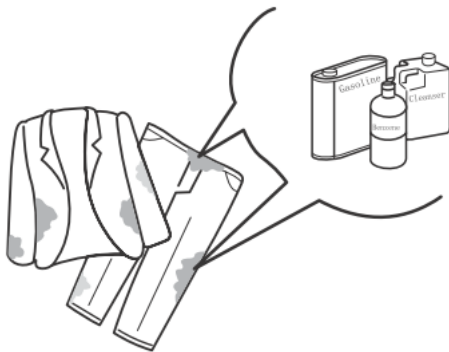

 
如果設備損壞，故障，部分拆卸，缺少零件或損壞（包括電線或插頭損壞），切勿嘗試操作本設備。

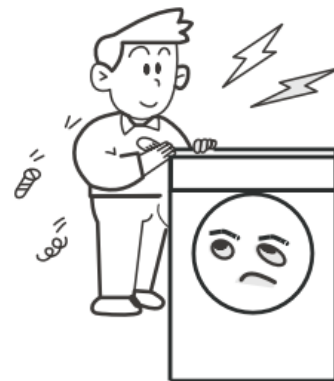

請勿讓兒童爬入/爬上設備。
在兒童附近使用本產品時，必須對兒童進行嚴密的監督。

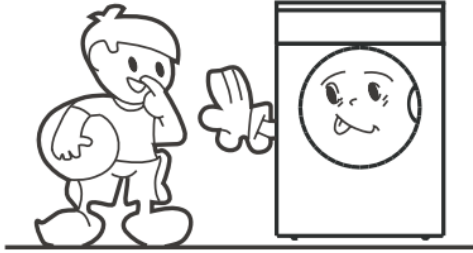 


當腳或手沾水時，請勿使用機器。

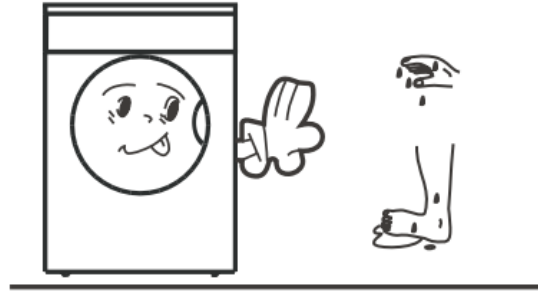 

在操作過程中，請勿將可能會燃燒或熔化的塑料，紙張或衣服放在乾衣機上。



 
不得將廢氣排入用於排出設備燃燒氣體或其他燃料煙霧的煙道。

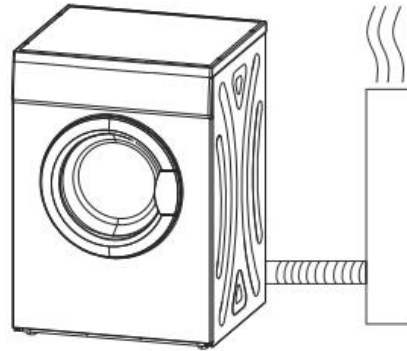

請勿乾燥含有橡膠，塑料或類似材料的物品，例如帶襯墊的胸罩，網球鞋，套鞋，浴墊，地毯，圍兜，嬰兒褲，雨衣塑料袋或可能熔化或燃燒的枕頭。一些橡膠材料在加熱時，在某些情況下會自燃而著火。




 僅在乾衣機程序完成後才能打開門。請勿在程序完成前打開門，以免皮膚被蒸汽或過熱的乾衣機燙傷。

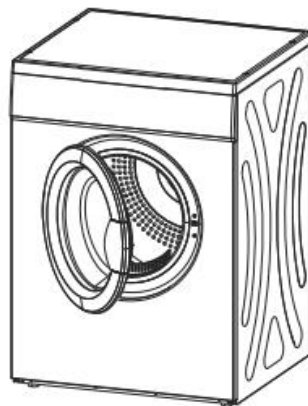



安裝

 ■ 產品介紹

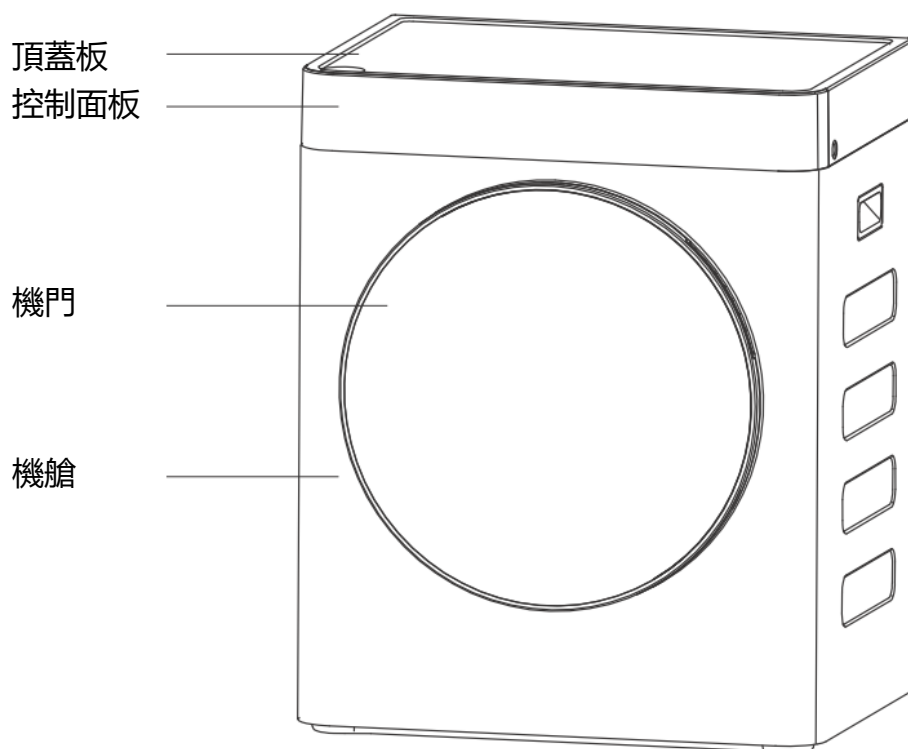


注意：請以您購買的實物為準。

 附件：

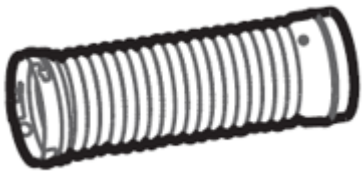	
出風管	彎管
1 個	1 個


■ 安裝步驟

 - 乾衣機應放置在距牆壁不少於 10cm 的通風區域。建議乾衣機前 1.5m 以內沒有障礙物，並保持通風。

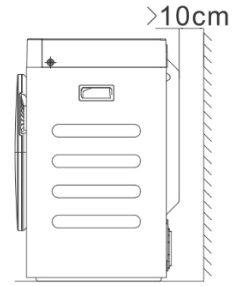

- 水平調整

 進入永久工作位置後，借助水平儀檢查乾衣機是否絕對水平。如果不是，請用工具調節支腳。

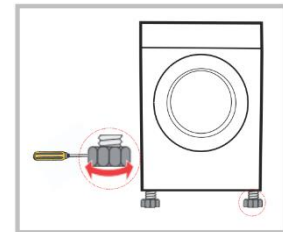

📌 注意！

如果乾衣機不能水平放置（傾斜角不超過 2°），則乾衣機將不平衡工作或有時停止工作。

安裝時的注意事項：

- 請勿將乾衣機安裝在露天或容易被雨淋損壞的地方；
- 請勿將乾衣機的背面放置在靠近窗簾或有風的地方；
- 請勿將乾衣機放置在氣體或易燃區域附近。

軟管固定

1. 將附件彎管水平向左或者向右，帶有卡槽的一端對準乾衣機背後的排氣口上，將卡扣用力推入卡槽(圖 1)。
2. 將附件出風管帶有卡槽的一端對準彎管卡扣推入，順時針旋轉卡入卡槽(圖 2)。
3. 將出風管的另一端平直從窗戶或牆孔引伸至室外。不能將伸縮管打折或引伸至下水道(圖 3，圖 4)。

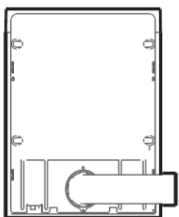 


圖 1

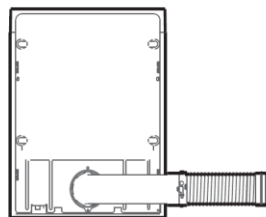 


圖 2

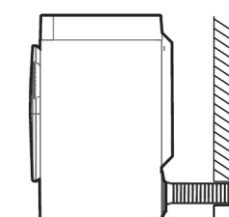 


圖 3

 



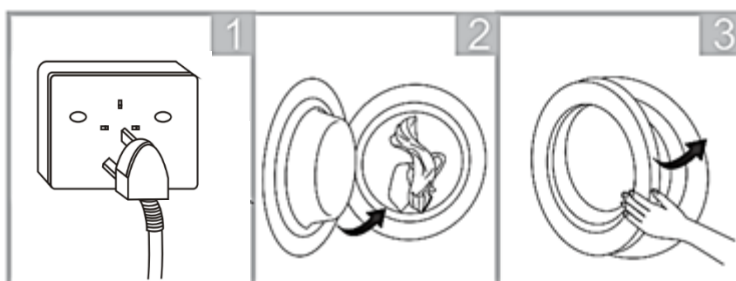 
圖 4

操作

■ 快速操作

 注意！

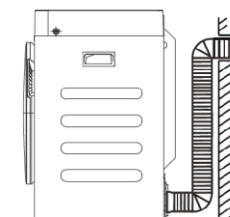使用前，請確保已正確安裝。



1 插入插頭

2 倒入衣物

3 關閉機門

乾衣操作



 
按“電源”鍵

選擇程序


按“開始”鍵

乾衣結束


程序提示器蜂鳴或顯示“0:00”。

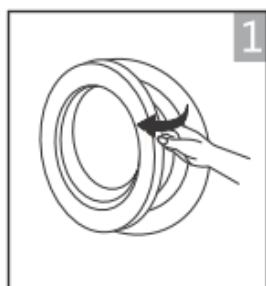

1 打開機門

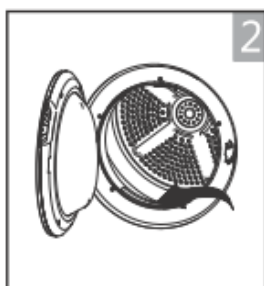 

2 清潔棉絮過濾網

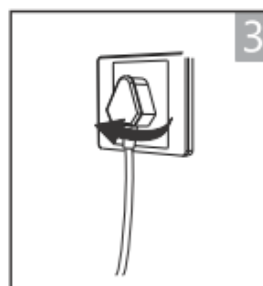 

3 拔除插頭

■ 每次乾衣之前

1. 在乾燥之前，將衣物在洗衣機徹底旋乾。高速旋轉可減少乾燥時間並節省能耗。
2. 為獲得均勻的烘乾效果，請根據織物類型和烘乾程序對衣物進行分類。
3. 烘乾前，請先關閉拉鍊，鉤眼，釦子，系上皮帶等。
4. 不要過度乾衣，因為過度烘乾的衣服很容易起皺。
5. 請勿乾燥含有橡膠或類似彈性材料的物品。
6. 只有在乾衣機程序完成後才幹呢打開幾門，避免皮膚燙傷或被蒸汽燙傷。
7. 每次使用後都要清潔棉絨過濾網和清空容器，以免延長乾燥時間和能耗。
8. 請勿在乾洗後將這些衣服放入乾衣機。













乾衣參考重量（每件）

 混物料的衣服 (約 800 克)	 夾克(約 800 克棉)	 牛仔褲(約 800 克)	 毛巾被(約 900 克棉)
 單床單(約 600 克棉)	 工作服(約 1120 克)	 睡衣(約 200 克)	 長袖襯衫(約 300 克棉)
 短袖上衣(約 180 克棉)	 短褲(約 70 克棉)	 襪子(約 50 克混編)	


⚠ 注意！

- 切勿超載。
- 不適用於滴水的紡織品。乾衣機可能會損壞，甚至起火。
- 不適合絲綢或羊毛紡織品。

如果您的衣服材料不合適被烘乾或帶有以下符號，請注意使用乾衣機：

 懸掛晾乾	 可滾筒乾燥	 不可滾筒乾燥	 不可烘乾
 可乾洗	 只能滴乾，不可擰扭或脫水	 平放晾乾	 避熱掛乾
 可用機器烘乾	 不可機器烘乾	 適合所有乾洗溶劑乾洗	 可用石油類或氟素 乾洗溶劑清洗

 ■ 控制面板

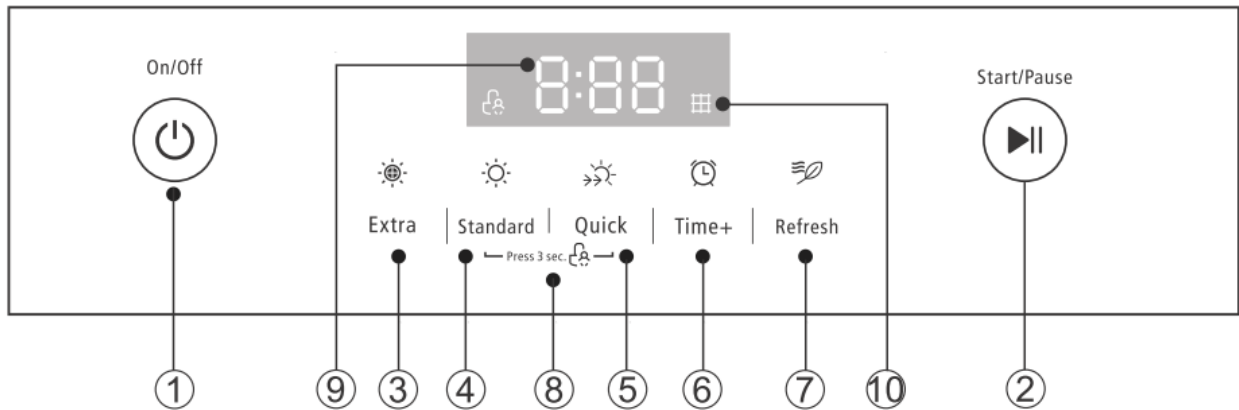

- | | | | | | |
|---|--|--|---|--|------------------------------------|
| ① | | 開關
連接電源並加載後，打開或關閉產品。 | ② | | 開始/暫停
按下按鈕開始或暫停使用產品。 |
| ③ | | 額外
晾乾棉質衣物。
乾燥程度：額外。 | ④ | | 標準
全力自動烘乾棉麻衣物。 |
| ⑤ | | 快速
纖維可快乾，混合織物負載在 0.8kg 以內。 | ⑥ | | 時間+
連續按下按鈕調整乾燥時間，範圍 10-120 分鐘。 |
| ⑦ | | 清爽
適合 1 公斤以內的衣物。 | | | |
| ⑧ | | 兒童鎖
此功能可以有效防止兒童誤按或操作乾衣機。設置此功能：同時按“標準”和“快速” 3 秒鐘，然後兒童鎖指示器亮起。 | | | |
| ⑨ | | 剩餘時間 | ⑩ | | 提醒您清潔過濾器
程序完成後，此燈點亮，以提醒用戶清潔過濾器。 |

注意！

- 清潔過濾器，機殼和內管。
- 乾衣機停止運轉後，當“過濾器”指示燈閃爍時，清潔過濾器。

■ 乾衣機程序表

程序	最大乾衣重量 (kg)	顯示時間	時間調整 (分鐘)
標準	3.0	1:46	/
額外	3.0	1:58	/
快速	0.8	0:45	/
時間+	1.0	0:10	10-120
清爽	1.0	0:10	10-60

注意！

 
- 不同系列的產品可能具有不同的兒童鎖組合按鍵。
- 機器開始運行後設置此功能。一旦兒童鎖啟動，乾衣機將鎖定各個按鍵（電源開/關鍵除外）。如果要操作乾衣機，請先解除兒童鎖。

維修保養

■ 清潔和保養


清潔過濾網

- 每次使用後都要清潔棉絨過濾網。
筆直向上拉出。
- 清潔過濾網。
用抹布或手指擦拭。
- 安裝過濾器
如果用濕布或水清潔過濾器，請在
太陽曬乾後安裝。

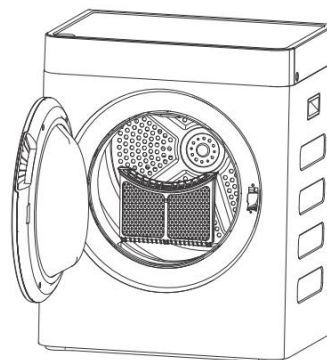

清潔機殼和內腔

 - 清潔機殼和內腔時，請使用柔軟的濕布擦拭。
- 不要直接用水沖洗。
- 不要使用中性的擦拭布。
- 不要用汽油和酒精擦拭。
- 清潔內管後，請確保打開前門進行通風。

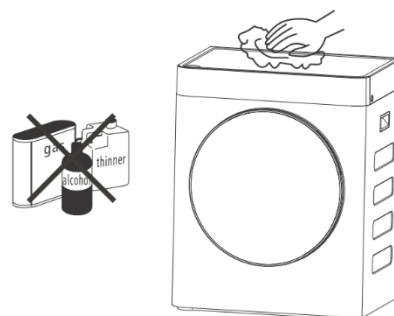

■ 疑難排解

故障表現	可能的原因	解決方案
產品不能啟動	<ul style="list-style-type: none"> ● 電壓沒有接通。 ● 電源插頭未插緊。 ● 衣服超載。 ● 溫度保險絲被切斷。 	<ul style="list-style-type: none"> ● 等待接通電源。 ● 檢查電源插座，確保插頭牢固。 ● 乾衣機中的衣服必須在甩乾後，並且乾燥的衣服不能超過 3kg。 ● 請專業技術人員維修更換保險絲。
外殼很熱或有異味	<ul style="list-style-type: none"> ● 絨毛過濾器髒了。 ● 吸氣管或排氣管很髒。 	<ul style="list-style-type: none"> ● 確保及時清潔棉絨過濾器。 ● 清潔污物。
衣服太乾	<ul style="list-style-type: none"> ● 放入機器的衣服超負荷。 ● 完成後沒有及時取出衣服。 ● 衣服分類不正確。 ● 溫度過高。 	<ul style="list-style-type: none"> ● 確保放入的衣服不過載。 ● 完成後立即取出衣服。 ● 注意衣服上的洗衣標籤。
衣服縮水	<ul style="list-style-type: none"> ● 太乾。 	<ul style="list-style-type: none"> ● 遵守衣服上的維護標籤。 ● 如果容易縮水，乾衣時應檢查衣物。在未完全乾透之前，把衣服拿出來。然後把衣服掛起來，直到完全乾燥。
衣服上的毛團	<ul style="list-style-type: none"> ● 適用於合成纖維和永久性壓榨纖維引起的毛團。這是因為摩擦引起的。 	<ul style="list-style-type: none"> ● 使用織物柔軟劑潤滑可有效避免。當熨衣服時，請將膠劑噴灑在袖口和領口上。將沙絲網調出以減少摩擦。

- 乾衣機運轉時可能會有聲音
由於沉重的濕衣服轉動和撞擊，因此會引起噪音。
- 撞擊聲：乾燥時，機器會產生蒸汽，蒸汽會從管道中逸出，這會增加與內桶底部碰撞的機會

故障代碼	解釋	可能的原因	出現故障後的動作
E33	溫度傳感器故障	溫度傳感器開路或短路	停止程式並進入故障狀態

■ 技術規格

型號:	PD3EV
尺寸: (深*寬*高 mm)	520*435*640
額定功率:	1250W
額定電源:	220-240V~
額定頻率 :	50Hz
淨重:	20kg
乾衣能力:	3.0kg
環境溫度 :	5°C~35°C

請記錄下列產品資料

- 型號 _____
- 機身編號. _____
- 經銷商名稱 _____
- 購買日期 _____

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請客戶服務中心聯絡，不便之處，敬請原諒。

ToolBox Customer Service Centr 客戶服務中心:

Service E-mail 電郵地址: 8210service@gilman-group.com

Please register now at 請即上網登記: www.toolbox.hk

Website 網址: www.gilman-group.com



太平家庭電器

Proudly Serviced by:

