



# Combination Microwave Oven

## USER MANUAL Model :PMG1620S

Read these instructions carefully before using your oven, and keep it carefully. If you follow the instructions, your oven will provide you with many years of good service.

**SAVE THIS USER MANUAL CAREFULLY**



# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

(c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

## Specifications

Model:	PMG1620S
Rated Voltage:	230V~50Hz
Rated Input Power(Microwave):	1250W
Rated Output Power(Microwave):	800W
Rated Input Power(Grill):	1000W
Oven Capacity:	20L
Turntable Diameter:	Ø245mm
External Dimensions:	595x344x382mm
Net Weight:	Approx. 15kg

# **IMPORTANT SAFETY INSTRUCTIONS**

## **WARNING**

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Only use utensils that are suitable for use in microwave oven.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers,

- keep an eye on the oven due to the possibility of ignition.
9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  10. Do not overcook food.
  11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
  12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
  13. Install or locate this oven only in accordance with the installation instructions provided.
  14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
  15. This appliance is intended to be used in household and similar applications such as:
    - staff kitchen areas in shops, offices and other working environments;
    - by clients in hotels, motels and other residential type environments;
    - farm houses;
    - bed and breakfast type environments.
  16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  17. Do not store or use this appliance outdoors.
  18. Do not use this oven near water, in a wet basement or near a swimming pool.
  19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated

surface, and do not cover any vents on the oven.

20. Do not let cord hang over edge of table or counter.

21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

24. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

25. Children should be supervised to ensure that they do not play with the appliance.

26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

27. Accessible parts may become hot during use. Young children should be kept away.

28. Steam cleaner is not to be used.

29. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

30. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a

temperature-sensing probe.)

31.WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

32.The microwave oven must be operated with the decorative door open.(for ovens with a decorative door.)

33.Surface of a storage cabinet can get hot.

34.The microwave oven is intended for heating food and beverages.Drying of food or clothing and heating of warming pads,slippers,sponges,damp cloth and similar may lead to risk of injury,ignition or fire.

35. Metallic containers for food and beverages are not allowed during microwave cooking.

**READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

# To Reduce the Risk of Injury to Persons Grounding Installation

## **DANGER**

Electric Shock Hazard  
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

## **WARNING**

Electric Shock Hazard Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
  - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - 2)The extension cord must be a grounding-type 3-wire cord.
  - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.



## CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. **Cleaning Tip**---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

## UTENSILS CAUTION

### **Personal Injury Hazard**

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

## Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

## Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


# SETTING UP YOUR OVEN

## Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

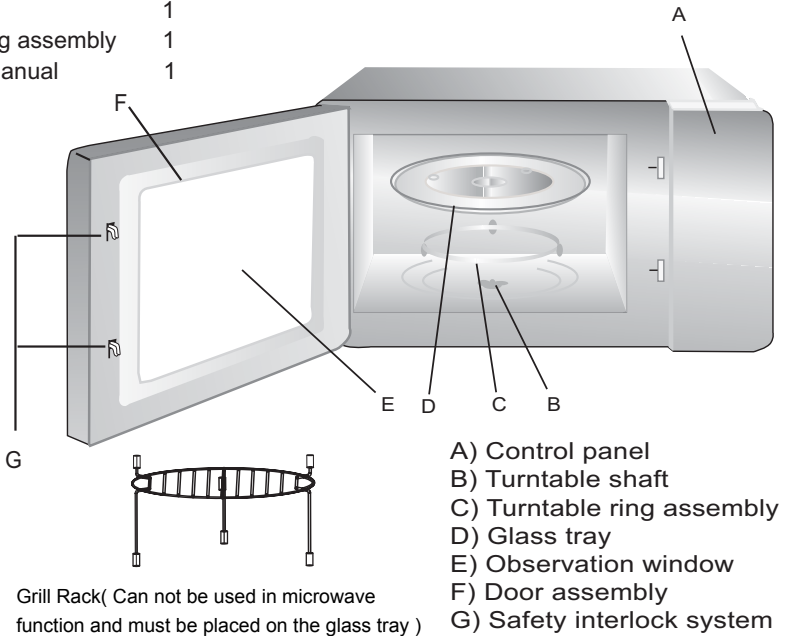

## Turntable Installation

Hub (underside)

Glass tray

Turntable shaft

Turntable ring assembly

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

## Installation and connection





- 1.This appliance is only intended for domestic use.
- 2.This oven is intended for built-in use only. It is not intended for counter-top use or for use inside a cupboard.
3. Please observe the special installation instructions.
- 4.The appliance can be installed in a 60cm wide wall-mounted cupboard.
- 5.The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
- 6.The mains voltage must correspond to the voltage specified on the rating plate.
- 7.The socket must be installed and connecting cable must only be replaced by a qualified electrician. If the plug is no longer to accessible following installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3mm.
- 8.Adapters, multi-way strips and extension leads must not be used. Overloading can result in a risk of fire.


**The accessible surface may be hot during operation.**



# Installation Instructions

Please Read the Manual Carefully Before Installation

- ADJUST SCREW A 
- SCREW B 
- TRIM-KIT PLASTIC 
- COVER 

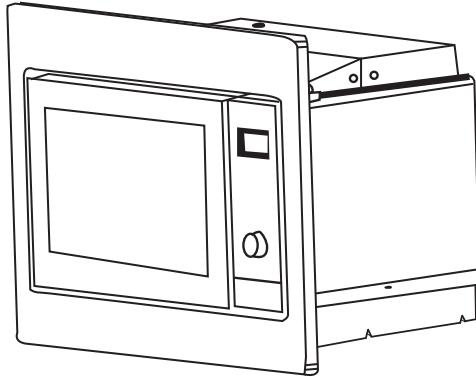

## Please Note

### Electrical connection

The oven is fitted with a plug and must be only connected to a properly installed earthed socket. In accordance with the appropriate regulations, the socket must only be installed and the connecting cable must only be replaced by a qualified electrician.

If the plug is no longer accessible following installation and all-pole isolating switch must be present on the installation side with a contact gap of at least 3mm.



## A. Built-in furniture

The built-in cabinet shall not have a rear wall behind the appliance.


Minimum installation height is 85cm.

Do not cover ventilation slots and air intake points.


1.

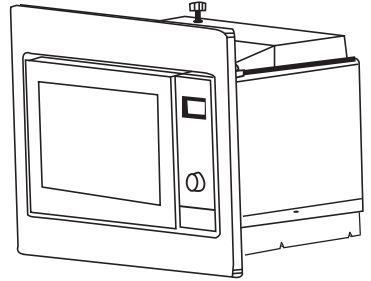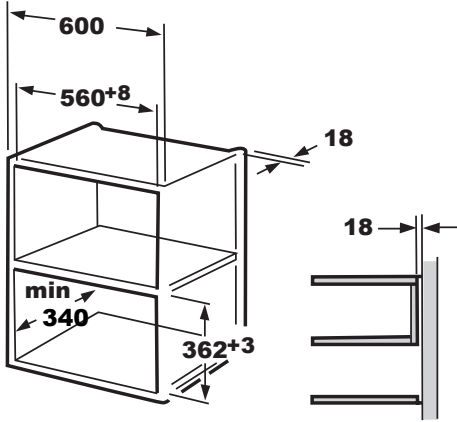

2.

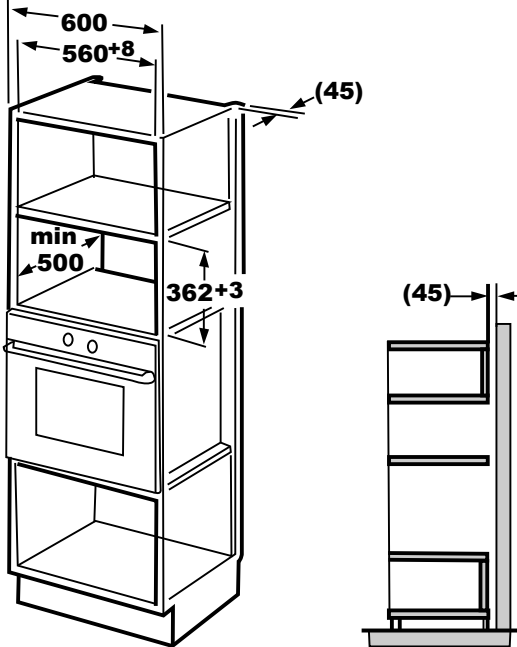


## B. Install the Oven

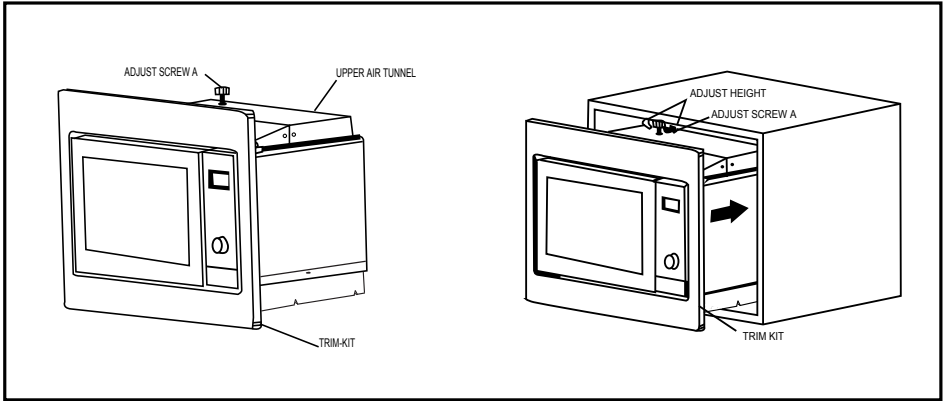


1. Fix ADJSUTSCREW A on the UPPER AIR TUNNEL of the oven, and then install the oven into the cabinet.



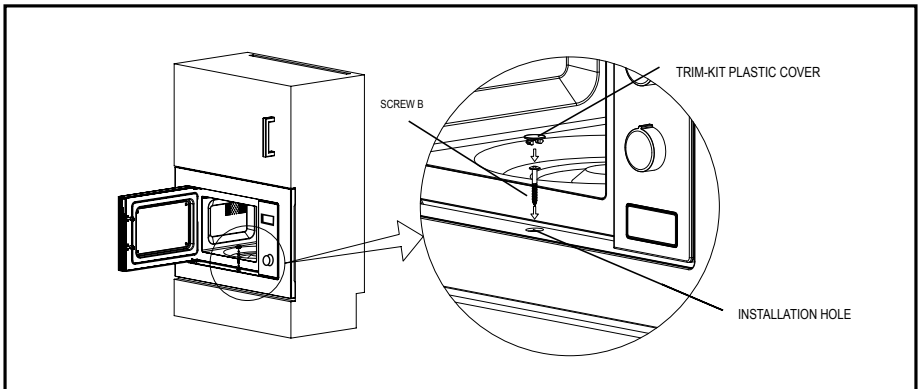



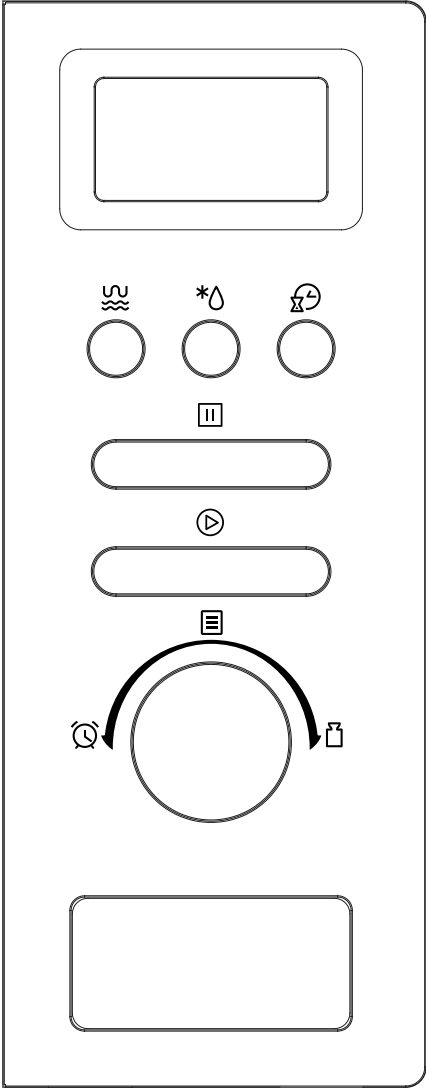

- Adjust the height of ADJUST SCREW A to keep 1mm gap between the ADJUST SCREW A and the top plane of cabinet.
- Do not trap or kink the power cord.
- Make sure that the oven is installed in the center of the cabinet.



2. Open the door; fix the oven to the cabinet with SCREW B at the INSTALLATION HOLE of TRIM KIT. Then fix the TRIM-KIT PLASTIC COVER to the INSTALLATION HOLE.

# Control panel



	Microwave/ Grill/Combi.
	Weight/Time Defrost
	Kitchen Timer/ Clock
	Stop/Clear
	Start/ +30SEC./Confirm
	Auto Menu
	Timer
	Weight




# Operation Instructions

## 1. Clock Setting

When the microwave oven is electrified, the screen will display "0:00", buzzer will ring once.

1) Press "**Kitchen Timer/Clock**" twice to select clock function, the hour figures will flash.


---

2) Turn "" to adjust the hour figures, the input time should be within 0--23.

---

3) Press "**Kitchen Timer/Clock**", the minute figures will flash.

---

4) Turn "" to adjust the minute figures, the input time should be within 0--59.

---



5) Press "**Kitchen Timer/Clock**" to finish clock setting. ":" will flash, and the time will light.

---

Note: 1) If the clock is not set, it would not function when powered.

2) During the process of clock setting, if you press "**Stop/Clear**", the oven will go back to the previous status automatically.


## 2. Microwave Cooking

Press "**Microwave/Grill/Combi.**" once, the screen will display "P100". Press "**Microwave/Grill/Combi.**" repeatedly or turn "" to choose the power you want, and "P100", "P 80", "P 50", "P 30", "P 10", "G", "C-1" or "C-2" will display for each added press. Then press "**Start/+30Sec./Confirm**" to confirm, and turn "" to set cooking time from 0:05 to 95:00. Press "**Start/+30Sec./Confirm**" again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as the following steps.

1) Press "**Microwave/Grill/Combi.**" once, the screen displays "P100".


---

2) Press "**Microwave/Grill/Combi.**" once again or turn "" to choose 80% microwave power.

---

3) Press "**Start/+30Sec./Confirm**" to confirm, and the screen displays "P 80".

---

4) Turn "" to adjust the cooking time until the oven displays "20:00".

---



5) Press "**Start/+30Sec./Confirm**" to start cooking.

Note: the step quantities for the adjustment time of the coding switch are as follow:

- 0---1 min : 5 seconds
- 1---5 min : 10 seconds
- 5---10 min : 30 seconds
- 10---30 min : 1 minute
- 30---95 min : 5 minutes


" Microwave/Grill/Combi. " Order	Pad instructions Display	Microwave Power	Grill Power
1	P100	100%	
2	P80	80%	
3	P50	50%	
4	P30	30%	
5	P10	10%	
6	G	0%	100%
7	C-1	55%	45%
8	C-2	36%	64%

### 3. Grill or Combi. Cooking


Press " Microwave/Grill/Combi. " once, the screen will display "P100". Press " Microwave/Grill/Combi. " repeatedly or turn  to choose the power you want, and "P100", "P 80", "P 50", "P 30" ,"P 10" ,"G" ,"C-1" or "C-2" will display for each added press. Then press " Start/+30Sec./Confirm " to confirm, and turn  to set cooking time from 0:05 to 95:00. Press " Start/+30Sec./Confirm " again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power (C-1) to cook for 10 minutes, you can operate the oven as the following steps.

- 1) Press " **Microwave/Grill/Combi** " once, the screen displays "P100".

---
- 2) Press " **Microwave/Grill/Combi** " for times or turn "  " to choose combi. 1 mode.


---
- 3) Press " **Start/+30Sec./Confirm** " to confirm, and the screen displays "C-1".

---
- 4) Turn "  " to adjust the cooking time until the oven displays "10:00".

---
- 5) Press " **Start/+30Sec./Confirm** " to start cooking.


Note: If half the grill time passed, the oven sounds twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over, close the door, and then press " **Start/+30Sec./Confirm** " to continue cooking. If no operation, the oven will continue working.

#### 4. Quick Start

- 1) At standby mode, Press " **Start/+30Sec./Confirm** " to start 30 seconds cooking with 100% power, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In microwave, grill, combination cooking or time defrost state, each press of " **Start/+30Sec./Confirm** " can increase 30 seconds of cooking time.
- 3) At Standby mode, turn "  " left to set cooking time with 100% microwave power, then press " **Start/+30Sec./Confirm** " to start cooking.

#### 5. Defrost By Weight


- 1) Press " **Weight/Time Defrost** " once, and the oven will display "dEF1".

---
- 2) Turn "  " to select the weight of food from 100 to 2000 g.

---
- 3) Press " **Start/+30Sec./Confirm** " to start defrosting.


#### 6. Defrost By Time

- 1) Press " **Weight/Time Defrost** " twice, and the oven will display "dEF2".

---
- 2) Turn "  " to select the defrost time. The MAX time is 95 minutes.

---
- 3) Press " **Start/+30Sec./Confirm** " to start defrosting. The defrost power is P 30, and it cannot be changed.


## 7. Kitchen Timer

- (1) Press " **Kitchen Timer/Clock** " once, the screen will display 00:00.
- (2) Turn "  " to enter the correct time. (The maximum cooking time is 95 minutes.)
- (3) Press " **Start/+30Sec./Confirm** " to confirm setting.
- (4) When the selected time is reached, the buzzer will ring 5 times.


If the clock has been set (24-hour system), the screen will display the current time.


Note: The kitchen Time is different from 24-hour system. Kitchen Timer is a timer.

## 8. Auto Menu


- 1) Turn "  " right to choose the menu, and "A-1" to "A-8" will display.

---
- 2) Press " **Start/+30Sec./Confirm** " to confirm.

---
- 3) Turn "  " to choose the default weight as the menu chart.

---
- 4) Press " **Start/+30Sec./Confirm** " to start cooking.  
Example: If you want to use "Auto Menu" to cook fish for 350g.
  - 1) Turn "  " clockwise till "A-6" displays.

---
  - 2) Press " **Start/+30Sec./Confirm** " to confirm.

---
  - 3) Turn "  " to select the weight of fish till "350" displays.

---
  - 4) Press " **Start/+30Sec./Confirm** " to start cooking.

The menu chart:


Menu	Weight	Display
A-1 Pizza	200 g	200
	400 g	400
A-2 Meat	250 g	250
	350 g	350
	450 g	450
A-3 Vegetable	200 g	200
	300 g	300
	400 g	400
A-4 Pasta	50g(with 450 ml cold water)	50
	100g(with 800 ml cold water)	100
A-5 Potato	200 g	200
	400 g	400
	600 g	600
A-6 Fish	250 g	250
	350 g	350
	450 g	450
A-7 Beverage	1 cup(120 ml)	1
	2 cups(240 ml)	2
	3 cups(360ml)	3
A-8 Popcorn	50 g	50
	100 g	100

## 9. Multi-section cooking


At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Example: If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, operate it as the following:


- 1) Press " **Weight/Time Defrost** " twice, and the oven will display "dEF2".

---
- 2) Turn "  " to select the defrost time till "5:00" displays.

---
- 3) Press " **Microwave/Grill/Combi.** " once, the screen displays "P100".

---
- 4) Press " **Microwave/Grill/Combi.** " once again or turn "  " to choose 80% microwave power.

---
- 5) Press " **Start/+30Sec./Confirm** " to confirm, and the screen displays "P 80".

 
---
- 6) Turn "  " to adjust the cooking time till the oven displays "7:00".

---
- 7) Press " **Start/+30Sec./Confirm** " to start cooking, and buzzer will sound once for the first section, defrosting time counts down. Buzzer will sound once again entering the second cooking. When cooking finishes, buzzer sounds five times.

## 10. Inquiring Function

- (1) In states of microwave, grill and combination cooking, press " **Microwave/Grill/Combi.** ", the current power will be displayed for 3 seconds. After 3 seconds, the oven will turn back to the former state.
- (2) In cooking state, press " **Kitchen Timer/Clock** " to inquire the time and the time will display for 3 seconds.

## 11. Lock-out Function for Children

Lock: In standby mode, press " **Stop/Clear** " for 3 seconds, there will be a long beep denoting entering the children-lock state.  will light and current time will display if the time has been set. Otherwise, "[ \_ \_ ]" will display.

Lock quitting: In locked state, press " **Stop/Clear** " for 3 seconds, there will be a long "beep" denoting that the lock is released.

## Trouble shooting

<b>Normal</b>	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

<b>Trouble</b>	<b>Possible Cause</b>	<b>Remedy</b>
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

請記錄下列產品資料

- 型號 \_\_\_\_\_
- 機身編號 \_\_\_\_\_
- 經銷商名稱 \_\_\_\_\_
- 購買日期 \_\_\_\_\_

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

### **ToolBox Customer Service Centre 客戶服務中心：**

7/F., Goodwill Industrial Building, 36-44 Pak Tin Par Street, Tsuen Wan, N. T.  
新界荃灣白田壩街36-44號信義工業大廈7樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210  
Service E-mail 電郵地址：8210service@gilman-group.com  
Please register now at 請即上網登記：www.toolbox.hk  
Website 網址：www.gilman-group.com



Proudly Serviced by:



## **太平家庭電器**

2/F, Shing Dao Industrial Building, 232 Aberdeen Main Road, Hong Kong  
香港香港仔大道232號城都工業大廈2樓





二合一微波燒烤爐

使用說明書

型號：PMG1620S

於使用焗爐前，請仔細閱讀並妥善保存本使用說明書。

倘若按照以下指引說明正確使用焗爐，焗爐的使用壽命可延長。

**請妥善保存本使用說明書**

## 避免暴露於過多微波能的預防措施

- (a) 微波爐門打開時，請勿操作，因為這會暴露有害的微波能。切勿損壞或竄改安全鎖。
- (b) 請勿在微波爐的前表面與門之間放置任何物體，或讓沙礫或清潔劑殘餘物累積在密封表面上。
- (c) 警告：如果門或門密封件受損，在合格的人員修理好之前，切勿操作微波爐。

## 注意事項

如微波爐未保持清潔，表面可能劣化，因此影響微波爐的使用壽命，而且可能導致危險狀況。

## 規格

型號：	PMG1620S
額定電壓：	230伏特~50赫茲
額定輸入功率（微波爐）：	1250瓦
額定輸出功率（微波爐）：	800瓦
額定輸入功率（燒烤）：	1000瓦
微波爐容量：	20公升
轉盤直徑：	245厘米
外觀尺寸	595x344x382厘米
淨重：	約 15公斤

## 重要安全指示與警告

使用微波爐時，為降低火災、觸電或暴露於過量微波能而受傷害，請遵守基本預防措施及以下事項：

1. 警告：液體及其他食物不得使用密封的容器來加熱，因為這可能造成爆炸。
2. 警告：微波爐的蓋子是用來防止暴露於微波能，任何涉及移除蓋子的操作或維修作業，必須由合資格的人員來進行，由任何其他人員進行可能造成危險。
3. 8歲以上的兒童，以及肢體、感官或心智能力受損，或者缺乏經驗和知識的人，如果受到監督及如何安全使用產品的指示，且了解涉及的危險，方可使用本產品。兒童不得玩弄微波爐。除非是8歲以上的兒童且有人監督，否則兒童不得執行清潔和保養工作。
4. 勿讓8歲以下的兒童碰觸本產品及電線。
5. 僅使用適合用於微波爐的容器。
6. 定期清潔微波爐，去除食物殘渣。
7. 閱讀並遵守「避免暴露於過多微波能的預防措施」。
8. 使用塑膠或紙容器加熱食物時，請注視微波爐，因為這可能引發燃燒。
9. 如果微波爐冒煙，請關閉微波爐或拔掉插頭，且勿打開微波爐門，以悶熄任何火焰。
10. 請勿讓食物過度烹調加熱。
11. 請勿使用微波爐腔體來存放物品。勿將麵包、餅乾等存放在微波爐內。
12. 在將塑膠或紙容器放入微波爐內之前，務必將捲線和金屬把手取下。
13. 僅根據本使用說明書的指示來安裝和放置微波爐。

14. 帶殼蛋及整顆熟蛋不得放入微波爐加熱，因為它們可能爆炸，甚至是在微波加熱結束後。
15. 本產品適合家用及以下類似的應用：
  - 商店、辦公室及其他工作場所的員工廚房；
  - 在飯店、旅館及其他住宿環境由顧客使用；
  - 農舍；
  - 提供住宿和早餐的場所。
16. 如供應的電線受損，必須由製造商、經銷商或合格的人員來更換，以避免發生危險。
17. 請勿在室外存放或使用本產品。
18. 請勿在附近有水的地方、潮濕的地下室或游泳池附近使用本產品。
19. 微波爐在運轉時，可接觸的表面溫度可能很高。微波爐在使用期間，表面可能高熱。請將電線遠離高熱的表面，請勿蓋住微波爐的任何通氣孔。
20. 請勿讓電線懸掛在桌子或廚櫃檯邊緣。
21. 若微波爐未能保持乾淨狀態，可能導致表面劣化。這會對產品的使用壽命造成負面影響，且可能導致危險情況。
22. 奶瓶及嬰兒食品罐的內容物應攪拌或搖一搖，並檢查溫度在餵食，以避免燙傷。
23. 使用微波爐來加熱飲料，可能會發生過一會才噴出沸騰的情況，因此在拿取容器時必須謹慎小心。
24. 肢體、感官或心智能力受損（包括兒童），或者缺乏知識和經驗的人，除了在負責其安全之人的監督及教導如何使用下，不應使用本產品。
25. 注意兒童，確保他們不會玩弄微波爐。
26. 本產品不得使用外部計時器或單獨的遙控器來操作。
27. 在使用期間，可碰觸的零件可能變得高熱。幼童應保持距離。

28. 不可對本產品使用蒸汽式清潔機。
29. 微波爐在使用期間可能變得高熱，因此必須謹慎小心，避免碰觸微波爐內的高熱元件。
30. 僅使用建議可用於本微波爐的溫度探測器（溫度感應器）（針對附有可使用溫度感應器的裝置的微波爐）。
31. 警告：微波爐及其可碰觸的零件，在使用時可能變得高熱，因此應謹慎避免碰觸高熱的元件。除非有適當的人持續監督，否則8歲以下的兒童應遠離微波爐。
32. 裝置門必須打開，才能使用微波爐（針對有裝置門的微波爐）。
33. 放置微波爐的櫥櫃表面可能變得高熱。

請仔細閱讀本使用說明書，並妥善保存，以備未來參考。

# 降低人受傷風險

## 接地裝置

### 危險

避免觸電危險

碰觸內部的某些元件可能導致受傷或死亡。請勿拆解本產品。

### 警告

避免觸電危險

接地裝置使用不當可能造成觸電。本產品適當安裝和接地之前，請勿將插頭插入插座。

本產品必須接地。如發生短路，接地可為電流提供逃脫線，因此降低觸電風險。本產品配備有接地線和接地插頭的電線。插頭必須插入已適當安裝和接地的插座。

如不完全了解使用說明，或者如果對微波爐是否已適當接地存疑，請詢問合格的電工或維修人員。如需使用延長線，請只使用三線延長線。

1. 本產品附上一條短電源供應線，以降低被長電線纏住或絆倒的風險。
2. 如果使用長電線組或延長線：
  - 1) 電線組或延長線標示的額定電功率，至少應與微波爐的額定電功率一樣大。
  - 2) 延長線必須是接地用的三線電線。
  - 3) 長電線應安排妥當，不要懸掛在廚櫃檯或桌子上，讓兒童容易拉取或不慎絆倒。

## 清潔

請務必將微波爐的電源插頭拔掉。

1. 使用微波爐後，請用稍微沾濕的布擦拭微波爐腔體。
2. 請使用肥皂水，以適當的方式清潔配件。
3. 門框、密封件及附近的零件髒污時，必須使用濕布小心清潔。
4. 請勿使用強烈的腐蝕性清潔劑或尖銳的金屬刮板來清潔微波爐的門玻璃，因為這可能刮傷表面，並造成玻璃碎裂。
5. 清潔訣竅---為了更容易清潔腔體壁：

在碗中放入半顆檸檬，加入300毫升 ( 1/2品脫 ) 的水，然後以100%微波功率加熱10分鐘。使用軟乾布將微波爐擦乾淨。

## 器皿

### 注意事項

#### 避免人受傷危險

微波爐的蓋子是用來防止暴露於微波能，任何涉及移除蓋子的操作或維修作業，必須由合格的人員來進行，由任何其他人進行可能造成危險。

請參考「可用於微波爐的材質」或「避免用於微波爐的材質」。

有些非金屬器皿也不適合用於微波爐。如有疑問，可利用以下步驟來測試器皿是否適合。

容器測試：

1. 在一個可用於微波爐的容器中加入一杯冷水 ( 250毫升 )，連同一個空器皿放入微波爐中。
2. 以最大功率加熱1分鐘。
3. 小心觸摸空器皿。如果空器皿是溫熱的，請勿將該器皿用於微波烹調。
4. 加熱時間不得超過1分鐘。

## 可用於微波爐的材質

器皿	備註
鋁箔	僅能用來覆蓋。紅肉或禽肉較薄的部分可使用小塊的軟鋁箔來覆蓋。如果鋁箔太接近爐壁，可能產生電弧。鋁箔應與爐壁保持至少1英吋（2.5公分）的距離。
燒烤盤（Browning dish）	請遵守製造商的指示。燒烤盤的底部應在轉盤上方至少3/16英吋（5厘米）。使用不正確可能導致轉盤破裂。
陶瓷餐具	僅能使用可用於微波爐的陶瓷餐具。請遵守製造商的指示。切勿使用破裂或缺角的餐具。
玻璃罐	務必取下蓋子。使用時，僅將食物加熱到溫熱。大部分的玻璃罐都不耐熱，可能會破裂。
玻璃餐具	僅使用耐熱且適用於微波爐的玻璃餐具。請確定邊緣無金屬。切勿使用破裂或缺角的餐具。
微波爐加熱袋	請遵守製造商的指示。請勿使用金屬綁繩來封住加熱袋。請留下縫隙，讓蒸汽逸出。
紙盤與紙杯	僅用於短時間的烹調/加熱。在烹調時切勿無人看顧。
紙巾	用於蓋住食物，以再次加熱或吸附油脂。僅用於短時間烹調，且必須在旁看顧。
塑膠	僅能使用可用於微波爐的塑膠容器。請遵守製造商的指示。容器上必須有「適用於微波爐」的標示。有些塑膠容器在裡面的食物變熱後會變軟。使用「蒸煮袋」（Boiling bag）或密封的塑膠袋時，應依照包裝上的指示，將袋子切口、刺破或開孔。
保鮮膜	僅能使用可用於微波爐的保鮮膜。在烹調期間蓋住食物，以保持水分。勿讓保鮮膜接觸到食物。
溫度計	僅能使用可用於微波爐的溫度計（肉或糖溫度計）。
防油紙	用來蓋住食物，以防止油濺出、保留水分或產生蒸汽。

## 避免用於微波爐的材質

器皿	備註
鋁盤	可能產生電弧。請將食物換到可用於微波爐的容器。
有金屬把手的紙盒	可能產生電弧。請將食物換到可用於微波爐的容器。
金屬或金屬邊的器皿	金屬會讓食物無法接受微波能。金屬邊可能產生電弧。
金屬綁繩	可能造成電弧，且可能造成微波爐內燃燒。
紙袋	可能造成微波爐內燃燒。
塑膠泡棉	塑膠泡棉暴露於高溫時可能熔化，或污染微波爐中的液體。
木材	在微波爐中使用木材，木材可能會乾掉，且可能裂開或破裂。



# 設定微波爐

## 微波爐零件與配件的名稱


從紙箱和微波爐腔體中取出微波爐及所有配件。

您的微波爐有以下配件：

玻璃盤 1

轉盤環組件 1

使用說明書 1

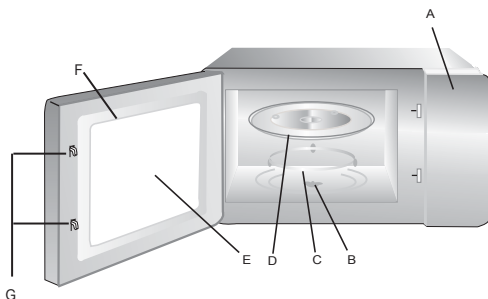

- A) 控制面板
- B) 轉盤軸
- C) 轉盤環組件
- D) 玻璃盤
- E) 觀察窗
- F) 門組件
- G) 安全互鎖系統



燒烤架 (僅能在燒烤功能下使用, 且應至於玻璃盤上)


## 安裝轉盤

輪轂 (在下面)

玻璃盤

轉軸

轉盤環組件

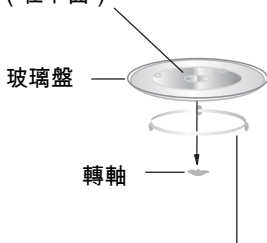

- a. 切勿將玻璃盤上下顛倒放置。玻璃盤永遠不應該受到限制。
- b. 在烹調期間，永遠必須使用玻璃盤及轉盤環組件。
- c. 所有食物及食物容器務必放置在玻璃盤上烹調。
- d. 如玻璃盤和轉盤環組件破裂或損壞，請聯絡最近的授權維修中心。

## 安裝在廚櫃檯上

取下所有包裝材料及配件。檢查微波爐是否有任何損壞，例如凹陷或門損壞。如微波爐有損傷，請勿安裝。

櫥櫃：移除微波爐櫥櫃表面上發現的任何保護膜。請勿移除微波爐腔體上用來保護磁控管的淡棕色雲母蓋。




## 安裝與接線


1. 本微波爐為家庭用產品。
2. 本微波爐僅設計用於嵌入式櫥櫃，非設計用於廚櫃檯上或碗櫥櫃內。
3. 請遵守特殊的安裝指示。
4. 本微波爐可安裝在60公分寬的壁掛式碗櫥櫃（至少55公分深，且距離地板至少85公分）。
5. 本產品配備一個插頭，只能連接到適當安裝且已接地的插座。
6. 電源電壓必須與額定銘牌上指明的電壓相符。
7. 插座的安裝以及連接纜線的更換必須由合格的電工來執行。如果安裝後無法觸及插頭，在安裝側上必須有個全極切斷裝置，且接觸間距至少必須有3公釐。
8. 不得使用轉接器、多路剝線（multi-way strip）及延長導線。電負荷超載可能導致火災。

在操作期間，可接觸的表面可能變得高熱。

# 安裝指示

安裝前請詳閱使用說明書

- 調整螺絲 A ———— 
- 螺絲 B ———— 
- 邊飾面板塑膠蓋 ———— 

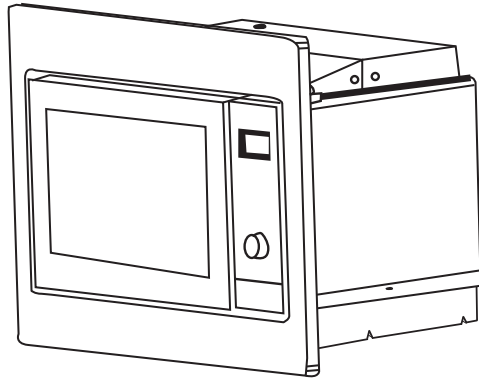

## 請注意

### 電力連接


微波爐配有一個插頭，只能連接到已適當安裝且接地的插座。為了符合相關法規，插座的安裝及連接電線的更換，必須由合格的電工來執行。

如果安裝後無法觸及插頭，在安裝側上必須有個全極切斷裝置，且接觸間距至少必須有3厘米。


## A. 嵌入式櫥櫃

- 嵌入式櫥櫃在微波爐的後方不得有櫃壁。
- 安裝高度至少應距離地板85公分。
- 請勿蓋住通風槽及進氣口。


1.

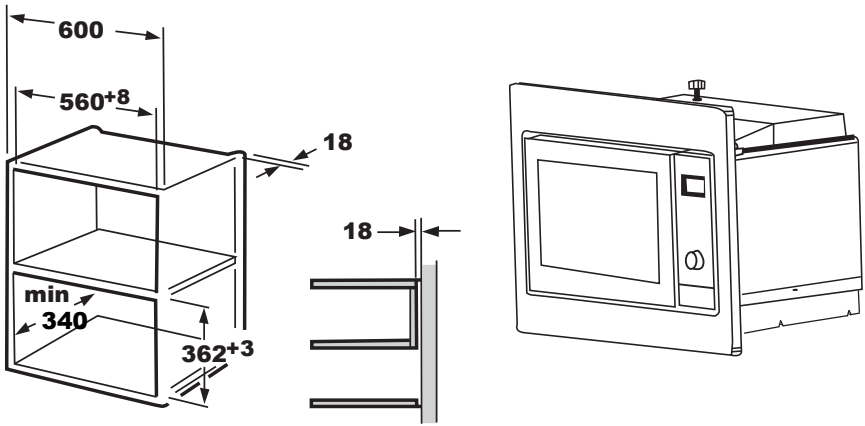


2.

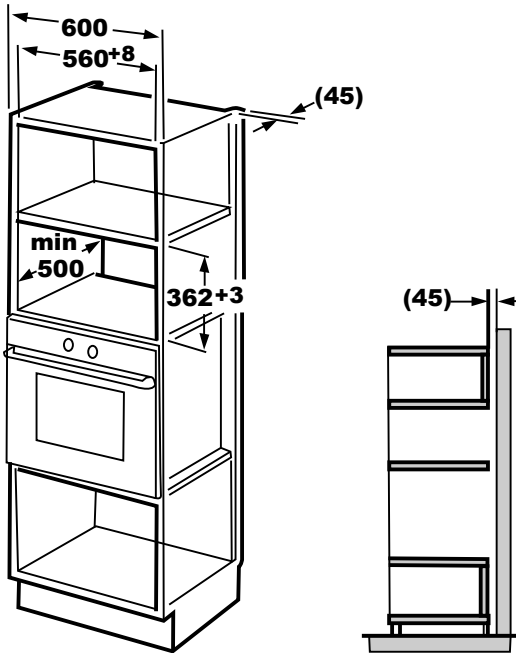

## B. 安裝微波爐

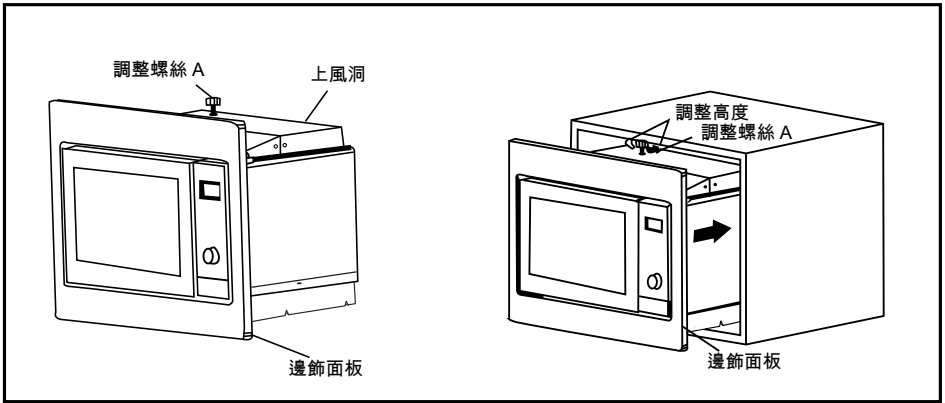


1. 將調整螺絲A固定在微波爐的上風洞，接著將微波爐安裝在櫥櫃中。
  - 調整螺絲A的高度，調整螺絲A應與櫥櫃上方平面保持1厘米的間距。
  - 請勿藏匿或扭轉電線。
  - 確定微波爐安裝在櫥櫃的中央。

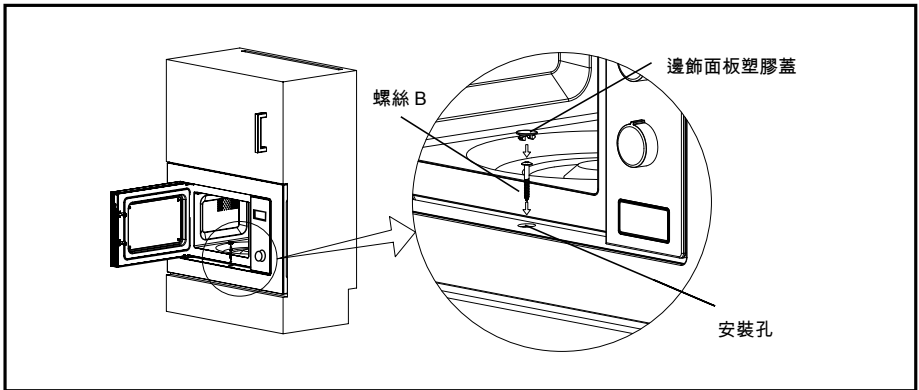

2. 打開門，使用在邊飾面板安裝孔的螺絲B，將微波爐固定在櫥櫃上。接著將邊飾面板塑膠蓋固定在安裝孔上。

# 控制面板

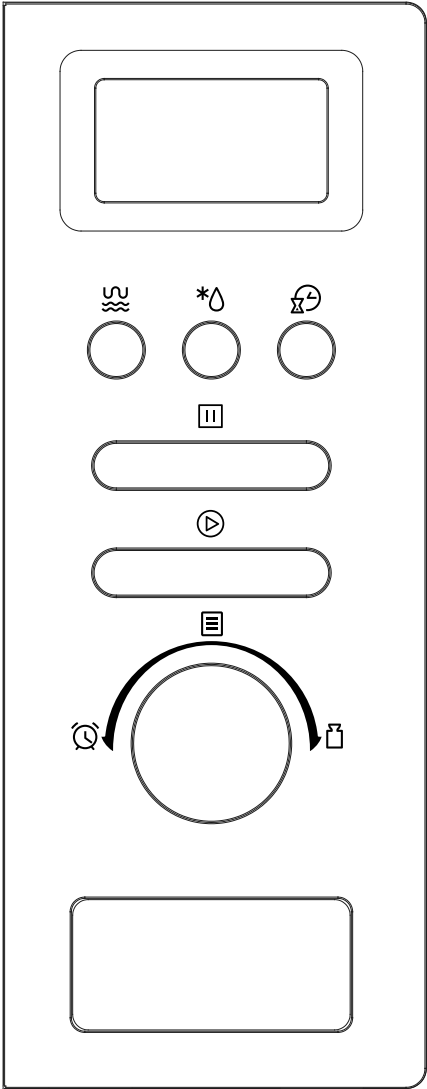

	Microwave/ Grill/Combi.	微波/燒烤/組合 功能選擇
	Weight/Time Defrost	重量/時間 解凍程式
	Kitchen Timer/ Clock	廚房計時器 / 時鐘
	Stop/Clear	停止 / 清除
	Start/ +30SEC./Confirm	開始 / +30秒 / 確認
	Auto Menu	自動烹調選單
	Timer	時間掣
	Weight	重量

# 操作說明

## 1. 設定時鐘

微波爐通電後，LED會顯示「0:00」，警鈴會響一次。


- 1) 按下「廚房計時器/時間」(Kitchen Timer/Clock)兩次來選擇時鐘功能，這時小時數字會閃爍。
- 2) 旋轉「」，可調整小時數字，輸入的時間應為「0--23」的數字。
- 3) 按下「廚房計時器/時間」(Kitchen Timer/Clock)，時間數字會閃爍。
- 4) 旋轉「」來調整分鐘數字，輸入的時間應為「0--59」的數字。
- 5) 按下「廚房計時器/時間」(Kitchen Timer/Clock)，可結束時間設定。「:」會閃爍，且時間會亮起。

**注意：** 1) 如未供電，時鐘不會運轉。


- 2) 在設定時間期間，如果您按下「停止/清除」(Stop/Clear)，微波爐會自動恢復到先前的狀態。

## 2. 微波烹調

按下「微波/燒烤/組合」(Microwave/Grill/Combi.)，LED會顯示「P100」。

按下「微波/燒烤/組合」(Microwave/Grill/Combi.)數次，或旋轉「」，可選擇您想要的功率，每按下一次，會接續顯示「P100」、「P80」、「P50」、「P30」或

「P10」。接著按下「開始/+30秒/確認」(Start/+30 Sec./Confirm)，便可確定操作，

接著旋轉「」，設定0:05到95:00的烹調時間。再次按下「開始/+30秒/確認」(Start/+30 Sec./Confirm)，便可開始烹調。

範例：如果您想要使用80%的微波功率來烹調20分鐘，您可按照以下步驟來操作微波爐。

- 1) 按下「微波/燒烤/組合」(Microwave/Grill/Combi.)一次，螢幕會顯示「P100」。
- 2) 再次按下「微波/燒烤/組合」(Microwave/Grill/Combi.)，或旋轉「」，可選擇80%微波功率。
- 3) 按下「開始/+30秒/確認」(Start/+30 Sec./Confirm)來確認，這時螢幕會顯示「P80」。
- 4) 旋轉「」來調整烹調時間，直到微波爐顯示「20:00」。
- 5) 按下「開始/+30秒/確認」(Start/+30 Sec./Confirm)，便可開始烹調。

**注意：**編碼開關調整時間的步驟量如下：

0---1分鐘：5秒

1---5分鐘：10秒

5---10分鐘：30秒

10---30分鐘：1分鐘


30---95分鐘：5分鐘


### 「微波」板指示



指令	顯示	微波功率
1	P100	100%
2	P80	80%
3	P50	50%
4	P30	30%
5	P10	10%

### 3. 燒烤或結合模式烹調

按下「微波/燒烤/組合」( Microwave/Grill/Combi. ) ,LED會顯示「P100」。

接著按下「微波/燒烤/組合」( Microwave/Grill/Combi. )數次，或旋轉「」，可選擇您想要的功率，每按下一次，會接續顯示「G」、「C-1」或「C-2」。

接著按下「開始/+30秒/確認」( Start/+30Sec./Confirm ) 來確認，並旋轉「」來設定0:05到95:00的烹調時間。再次按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，便可開始烹調。範例：如果您想要使用55%的微波功率及45%的燒烤功率( C-1 )來烹調10分鐘，您可按照以下 步驟來操作微波爐。

- 1) 按下「微波/燒烤/組合」( Microwave/Grill/Combi. ) 一次，螢幕會顯示「P100」。
- 2) 接著按下「微波/燒烤/組合」( Microwave/Grill/Combi. )數次，或旋轉「」，可選擇「C-1結合模式」。
- 3) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm ) 來確認，接著螢幕會顯示「C-1」。
- 4) 旋轉「」來調整烹調時間，直到微波爐顯示「10:00」。
- 5) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，便開始烹調。


### 「燒烤/結合模式」板指示




指令	顯示	微波功率	燒烤功率
1	G	0%	100%
2	C-1	55%	45%
3	C-2	36%	64%

**注意：**如果燒烤時間過了一半，微波爐會響兩次，這是正常的。為了讓食物燒烤的效果更好，應該將食物翻面，關上門，接著按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，便可繼續烹調。如無操作動作，微波爐會繼續運轉。


#### 4. 快速啟動

- 1) 在等候狀態，按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，可開始以100%功率烹調，每多按下一次，烹調時間會增加30秒，直到達到95分鐘。
- 2) 在微波烹調或時間除霜狀態，每按下一次「開始/+30秒/確認」( Start/+30Sec./Confirm )，可增加30秒烹調時間。
- 3) 在等候狀態，將「」往左旋轉，可設定100%微波功率的烹調時間，接著按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，便可開始烹調。


#### 5. 按重量除霜

- 1) 按下「重量/時間解凍」( Weight/Time Defrost ) 一次，微波爐會顯示「dEF1」。
- 2) 旋轉「」，選擇100公克到2000公克的食物重量。
- 3) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，便可開始解凍。

#### 6. 按時間除霜





- 1) 按下「重量/時間解凍」( Weight/Time Defrost ) 兩次，微波爐會顯示「dEF2」。
- 2) 旋轉「」來選擇解凍時間，最長時間為95分鐘。
- 3) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，便可開始解凍。解凍功率為P30，且不能改變。

## 7. 廚房計時器

- 1) 按下「廚房計時器/時間」( Kitchen Timer/Clock ) 一次，LED會顯示「00:00」，且時鐘指示器會亮起。
- 2) 旋轉「」，輸入正確的時間（最長烹調時間為95分鐘）。
- 3) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm ) 來確認設定，這時時鐘指示器會亮起。
- 4) 當設定時間一到，時鐘指示器會熄滅。警鈴會響5次。  
如果時鐘已設定為（24小時制），LED會顯示目前的時間。

注意：「廚房時間」非24小時制。「廚房計時器」是一種計時器。

## 8. 自動選單

- 1) 將「」往右轉來選擇選單，這時會顯示「A-1」到「A-8」，表示薄餅、肉類、蔬菜、義大利麵、馬鈴薯、魚類、飲料及爆米花。
- 2) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm ) 來確認。
- 3) 旋轉「」，可按照選單表來選擇預設重量。
- 4) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，便可開始烹調。  
範例：如果您想要使用「自動選單」( Auto Menu ) 來烹調350公克的魚。
  - 1) 順時鐘旋轉「」，直到顯示「A-6」。
  - 2) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm ) 來確認。
  - 3) 旋轉「」來選擇魚的重量，直到顯示「350」。
  - 4) 按下「開始/+30秒/確認」( Start/+30Sec./Confirm )，便可開始烹調。

**選單表：**

<b>選單</b>	<b>重量</b>	<b>顯示</b>
A-1 薄餅	200克	200
	400克	400
A-2 肉類	250克	250
	350克	350
	450克	450
A-3 蔬菜	200克	200
	300克	300
	400克	400
A-4 義大利麵	50克 ( 加450毫升冷水 )	50
	100克 ( 加800毫升冷水 )	100
A-5 馬鈴薯	200克	200
	400克	400
	600克	600
A-6 魚類	250克	250
	350克	350
	450克	450
A-7 飲料	1杯 ( 120毫升 )	1
	2杯 ( 240毫升 )	2
	3杯 ( 360毫升 )	3
A-8 爆米花	50克	50
	100克	100

## 9. 多段烹調

最多可設定兩段烹調。在多段烹調模式，如果其中一段是解凍，那麼第一段應設定解凍。

範例：如果您想要將食物解凍5分鐘，然後用80%的微波爐功率來烹調7分鐘，請依照以下步驟來操作：

- 1) 按下「重量/時間解凍」(Weight/Time Defrost) 兩次，微波爐會顯示「dEF2」。
- 2) 旋轉「」來選擇解凍時間，直到顯示「5:00」。
- 3) 按下「微波/燒烤/組合」(Microwave/Grill/Combi.) 一次，螢幕會顯示「P100」。
- 4) 再次按下「微波/燒烤/組合」(Microwave/Grill/Combi.)或旋轉「」，可選擇80%微波功率。
- 5) 按下「開始/+30秒/確認」(Start/+30Sec./Confirm) 來確認，這時螢幕會顯示「P 80」。
- 6) 旋轉「」來調整烹調時間，直到微波爐顯示「7:00」。
- 7) 按下「開始/+30秒/確認」(Start/+30Sec./Confirm)，便可開始烹調，在第一段解凍時間倒數，警鈴會響一次，進入第二段烹調時，警鈴會響第二次。烹調完成時，警鈴會響5次。

## 10. 查詢功能

- (1) 在微波、燒烤及結合模式烹調狀態，按下「微波/燒烤/組合」(Microwave/Grill/Combi.)，會有3秒鐘時間顯示目前的功率。3秒過後，微波爐會返回先前的狀態。
- (2) 在烹調狀態，按下「廚房計時器/時間」(Kitchen Timer/Clock) 可查詢時間，時間會持續顯示3秒鐘。

## 11. 為兒童安全的鎖閉功能

上鎖：在待機狀態，請持續按下「停止/清除」(Stop/Clear) 3秒，這時會發出長嗶聲，表示為兒童安全的鎖閉功能已啟動。如果計時器已啟動，會顯示目前的時間，否則LED會顯示

- **[-: -]** 。

解鎖：在上鎖狀態，請持續按「停止/清除」(Stop/Clear) 3秒，這時會發出長嗶聲，表示兒童安全鎖閉功能已解除。

## 疑難排解

問題	可能原因
微波爐干擾電視訊號接收	微波爐在操作時，可能干擾廣播和電視地訊號接收，跟攪拌器、吸塵器和電風扇等小家電的干擾類似，這是正常現象。
微波爐燈微弱	在低功率微波烹調狀態，微波爐燈可能變微弱。
門上蒸汽愈來愈多，熱氣從通氣孔冒出。	在烹調時，食物可能發散蒸汽。大部分的蒸汽會從通氣孔冒出，但有些蒸汽會累積在某些表面上，例如微波爐的門。
內無食物	注意：微波爐內沒有任何食物時，請勿操作裝置，因為這非常危險。

疑難	可能原因	矯正方法
微波爐無法啟動	(1) 電線插頭沒插緊。	拔掉插頭，過10秒鐘後再重新插上。
	(2) 保險絲燒斷，或斷路器發揮作用。	更換保險絲，或重設斷路器(必須由本公司專業人員維修)。
	(3) 插座有問題。	用其他電氣測試插座。
微波爐未加熱。	(4) 門沒關好。	將門關好。
微波爐運轉時，玻璃轉盤發出聲響。	(5) 微波爐底部的滾輪髒污。	參照「微波爐維修」，清潔髒污的零件。



根據「電機電子設備廢棄物」(Waste of Electrical and Electronic Equipment, WEEE) 指令，電機電子設備的廢棄物應單獨收集和處理。如您在未來需要處置本產品，請勿將本產品當作家庭垃圾來處理。請將本產品送到電機電子設備廢棄物場。

請記錄下列產品資料

● 型號

---

● 機身編號

---

● 經銷商名稱

---

● 購買日期

---

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

**ToolBox Customer Service Centre 客戶服務中心：**  
4/F, DCH Building, 20 Kai Cheung Road, Kolwoon Bay, Hong Kong  
香港九龍啟祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210  
Service E-mail 電郵地址：8210service@gilman-group.com  
Please register now at 請即上網登記：www.toolbox.hk  
Website 網址：www.gilman-group.com



a Gilman Group Company



