gemini

SAFETY INSTRUCTION

appliance is only to be used with the power supply : 5V 2.1A provided with the

t operate the appliance if the mains cable or the mains plug show signs of damage, 6-INCH CORDLESS RECHARGEABLE DESK FAN 6吋無線充電式座枱風扇

Model No./型號:GDF6W at the mains cable does not hang over sharp edges or allow i

the appliance on a flat, dry and heat resistance surface.

could be sucked into the fan, causing damage or injuries.

Do not use this fan in a damp area such as bathroom. o not use this fan near a window.

Jse this fan only as it is describe in this manual.

ep the appliance away from damp, and protect from splashes.

mponent Description: ①Fan hood knob ②Fan Mask ③Speed indicator

d oscillation can be used. The longer the battery is used or placed, the shorter the battery discharge time.

by children without supervised.

or shock hazards.

APPLIANCE COMPONENTS PRODUCT SPECIFICATION

odel: GDF6W

Battery capacity: 4000mAh Li-battery Product Dimensions:165 W*295 H*140 D mm

ower on / off /Speed & Oscillation keys. Power on/off speed wind function : Short press: •••• indicator USB charging port Power Supply Input (Micro) Rated Power

Working Voltage: DC5V/2.1A Power:7W

illation function: Long press for 2 seconds - (Switch light of power of attery margin indicator: four level of battery capacity indicato

Charging Time Charging Indicator inished Charging Indicator

unction + Oscillation function is about 9 hours

harging, the charging time will not meet our above conditions. . Place the fan on the desk / steady place .

HOW TO CHARGE

Insert the USB cable into the USB type C.charging port of the ${\sf Fan}$. Connect the USB type C.charging port with 5 V / 2.1 A USB socket, (such as a USB charger obile phone adapter, notebook computer).

.When using 2.1A USB charging device, it can be used for direct operation / charging hen the battery level is low, the fan speed will be automatically reduced. If the fan stops orking in a short time, please stop the fan and keep the battery fully charged. If you put product in a wet area, life of fan will be shortened.

ip: in order to shorten the charging time, please turn off the fan and connect the cable witl ne 5V / 2.1A USB charging device, some USB adapter may not have enough output currer which will reduce the charging speed or even stop charging. In order to prevent the battery from being damaged easily and increase the service life

of the battery, it is recommended to charge it once every two months.

Operation time when fully charged : **Low speed**: the use time of fan function is about 7.5 hours, and the use time of fan

function + Oscillation function is about 5 hours

Medium speed: the use time of fan function is about 5 hours, and the use time of fa unction + Oscillation function is about 3 hours

High speed: the use time of fan function is about 3.5 hours, and the use time of fan unction + Oscillation function is about 2.5 hours

Natural wind speed: the use time of fan function is about 15 hours,

ff in operation , please turn on the fan again to continue to use)

the equipment.

2. The battery is not detachable. Please do not squeeze or remove the battery. This may When the ambient temperature exceeds 50 °C / 140 °F, it is strictly prohibited to use the


Before seasonal storage, please charge the battery to 75% at least and suggest to charge the

For your safety, please do not put your fingers or any foreign matters into the fan or $\ensuremath{\mathsf{USB}}$

WHAT'S IN THE BOX

Fan *1 USB charging cable*1 User manual *1

HOW TO CLEAN

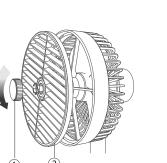

If you put the product in a wet place, its life will be shortened.





device, please use the return and collection systems or contact the

direction tightly.

otice: Cleaning and maintenance shall not be made by children .

Install the fan mask after cleaning.

MULTIPLE CIRCUIT PROTECION

revents the damage caused by the over charging of the battery. Over-discharge protection: when the battery is depleted. This product will automatically Over-voltage protection: When the external charging voltage is higher than 4.2V, it will

retailer where the product was purchased. They can take this produ for environmental safe recycling.

重要安全事項

≥fere using your product for first time,please read this instruction m 在使用本产品前, 请仔细阅读本说明书并保

注意:當使用此產品時,應遵循基本的安全預防措施,以減少火災,觸電和人身傷害的風險, 包括以下內容:

1.閱讀並保存此說明書。 2.檢查銘牌上標示的電壓。本產品應在DC 5V/2.1A的電力供應中使用。 3.兒童不得在沒有監督的情況下進行清潔和維護。

4.本產品只可與該產品所設置的供電裝置一起使用。 5.不正確的操作和不當的操作可能會導致設備故障和用戶受傷。

6.如果使用不當或操作不當,任何可能發生的損壞都不承擔任何責任。 7.如電線或插線位有損壞痕跡,則不要操作本產品。在這種情況下,如有必要, 可將本產品交給專業人員進行檢查和維修。

8.切勿拉扯電線或用濕手將電源插頭從插座上拔下 9.確保電源線不懸掛在有鋒利邊緣的地方。

10.防止本產品受潮,本產品不能被水濺濕。 11.不要讓8歲以下的兒童接觸到設備及電源線。


12.該產品請在平坦、乾燥和燥熱的表面使用。 13.不要在有汽油、油漆或易燃液體的地方使用。 14.不要讓頭髮、窗簾、桌布、衣服或其他物品靠近風扇的出風口。他們有可能被吸進

15.不要在浴室等潮濕地方使用該產品。 16.不要在窗戶上用該產品。

17.請按此手冊使用該產品。 18.不要試圖拆卸此產品進行維修,如果要維修,請將該產品送回我們的售後服務中心。

19.該產品所有部件不能隨意讓用戶自行替換。 20.本產品搖頭功能、風扇功能設有定時斷電功能,無人操作情況下,搖頭功能會默認定 時3小時自動關閉此功能,風扇涼風功能會默認定時10小時自動關機風扇功能。

21.風扇面罩可拆下清潔,清潔時需關機後現把風扇前面罩拆下。 22.無線使用電量不足的情況下,插上輸出電壓/電流為5V/2.1A以上充電插頭 (不供應此配件),並使用附送USB充電線進行充電,風扇功能、搖頭功能可以使用。 23.電池的使用時間與使用壽命,使用時間越長或放置的時間越久,電池放電時間會縮短。 ●此產品切勿與任何固態速度控制裝置使用,以免造成火災和/或斷路危險。 ●禁止幼兒/兒童伸手指進風扇網內,以免發生危險傷害。

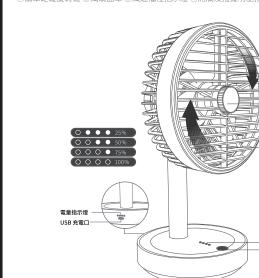

備註:產品圖片僅供參考,具體以實物為準

●8歲以上的兒童、身體、感觀、智力比較弱、欠經驗和知識的人仕,在經過指導說明 安全使用方法和知道可能的危險後,可以使用本機。兒童不可以把玩本產品,清潔 和維修不可給兒童處理。

● 給產品充電時,請使用輸出電壓/電流為5V/2.1A以上充電插頭(不供應此配件)

進行充電,並使用附送USB充電線。 ● 請勿自行拆卸,更改修理本產品。

①扇罩距離旋轉鈕 ②風扇面罩 ③風速檔位指示燈 ④開關及搖擺功能按鍵



安電源按鍵,風扇開啟後長按開關鍵2秒開啟搖擺功能,按6 欠長按2秒開關鍵,關閉搖擺功能,按鍵燈關閉。 t意:自動關機功能:搖擺功能將於連續開啟3小時自動關閉 |扇連續運作10小時會自動關閉風扇

量指示燈:四顆電量指示燈,分別對應25%,50%,75%, 量,當開關操作時,電量指示燈亮起3秒後關閉,當電量不足 要第一顆燈閃爍指示。接入電線充電時,對應的電量指示 滿電狀態為四顆燈—直亮(無燈閃爍)

只短按一下風扇按鍵,開啟低風速模式;短按第二次風扇按鍵,

如中風速模式;短按第三次風扇按鍵,開啟高風速模式;短按第 次風扇按鍵,開啟自然風模式;短按第五次風扇按鍵,關閉本機。

風扇頭調整角度 自動搖頭擺動角度

注意:只有2.1A設備(適配器,不附送此配件)。如果使用1A、2A裝置充電,充電時間將不符合我們 1.將風扇放到桌面上/平面上。

2.將USB電線插入風扇USB Type C充電孔位上。 3.將電線與5伏/2.1安培的USB與適配器插座連接,5伏/2.1安培適配器是正確充電插頭的最佳選擇

1.使用2.1A USB充電設備時,可供直接操作/充電 2.如果您使用的是2A或以下的USB充電插座,工作時不能給風扇充電,低功率時會自動降低風扇 轉速,如果風扇在短時間內停止工作,請保持電池充滿電。如果你把產品/電池放在潮濕的地方, 它的壽命會縮短。

是示:為了縮短充電時間,請關閉風扇,將電纜與5伏/2.1A的USB充電插頭,有些USB插座可能輸 出電流不足,會降低充電速度甚至停止充電,如USB充電器、手機充電線等。 3.為防止電池容易損壞,增加電池使用壽命,建議二個月充電一次。

充滿電使用時間: 低速:風扇功能使用時間約7小時,風扇功能+搖頭功能使用時間約5小時 中速:風扇功能使用時間約5小時,風扇功能+搖頭功能使用時間約3小時

高速:風扇功能使用時間約3.5小時,風扇功能+搖頭功能使用時間約2.5小時 自然風速:風扇功能使用時間約15小時,風扇功能+搖頭功能使用時間約9小時 (注意:在無人操作情況下,自動搖擺功能在連續開啟3小時會自動關機,風扇連續 使用10小時後自動關機,請重新開啟休眠自然風速繼續使用)

注意事項 1.當電源耗盡時,風扇轉速將自動降低以保護設備。

6.如果你把產品/電池放在潮濕的地方,它的壽命會縮短。

7.為了您的安全,請不要將手指或任何異物放入風扇或充電口。


2.電池是不可拆卸的,請不要擠壓或拆卸電池。這樣做可能導致環境污染甚至爆炸。 3.當環境溫度超過50°C/140°F時,嚴禁使用電池。 4.在季節性存儲之前,請將電池充電最少至75%,最少每隔2個月充電一次保養產品 電池使用壽命。 5.如果風扇在短時間內停止工作,請開機並保持電池充滿電。

產品內容 風扇一臺,USB充電線一條及說明書一本

清洗方法

Adjustable angle

Oscillation angle

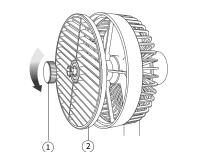


1. 關閉風扇; 2. 逆時針旋轉風扇上的①扇罩距離旋轉鈕,鬆開後取下②風扇面罩;

3. 用乾淨的布擦拭清潔風扇。 注意:擦拭風扇前風扇一定要停止工作;風扇不防水,不要放入水中;未經監督, 兒童不得進行清潔。 4.清潔完後需安裝好風扇面罩。

多重電路保護

過壓保護:當外部充電電壓高於3.7V,會停止充電。 過放保護:當電量耗盡時,風扇功能、搖頭功能會自動斷電,以保護電池。 過充保護:充電時當電池電壓達到4.2V時,停止充電,防止電池過充而損壞。

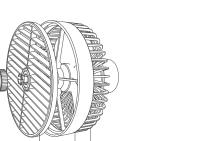

產品規格 型 號: GDF6W 工作電壓: DC5V/2.1A 使用功率: 7W 電池容量: 4000mAh 鋰電池 產品尺寸:165闊*295高*140深 毫米

此標記表明,本產品不應與其他家庭廢物一起處置。為防止不受控制的廢物 處置可能對環境或人類健康造成損害,對其進行負責任的回收,以促進物質

資源的可持續再利用。若要退回您的舊設備,請使用返回和收集系統,或聯繫 採購此產品的零售商。他們可以把這種產品用於環境安全回收。

• 機身編號 ● 購買日期

本產品不斷改進中,如功能有所更改,恕不另行通知,如有疑問,請與客戶服務中心聯 絡,不便之處,敬請原諒。

說明書內容以英文版本為準 ToolBox Customer Service Centre 客戶服務中心:

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

香港九龍灣啓祥20號大昌行集團大廈4樓 ustomer Service Hotline 客戶服務熱線:(852) 8210 8210 Service E-mail 電郵地址:8210service@gilman-group.com Please register now at 請即上網登記:www.toolbox.hk



Website網址:www.gilman-group.com

